

144LVD Intelligent Buoyancy Transmitter for Liquid Level, Interface and Density



The intelligent transmitter 144LVD is designed to perform continuous measurements for liquid level, interface or density of liquids in the process of all industrial applications. The measurement is based on the proven Archimedes buoyancy principle and thus extremely robust and durable. Measuring values can be transferred analog and digital. Digital communication facilitates complete operation and configuration via PC or control system. Despite high process pressure and corrosive liquids, the 144LVD measures with consistent reliability and high precision. For installations in contact with explosive atmospheres up to Zone 0, certificates are available. The 144LVD combines the abundant experience of FOXBORO ECKARDT with most advanced digital technology.

FEATURES

- Communication HART (also 4-20 mA), FoxCom, PROFIBUS PA or FOUNDATION Fieldbus
- Conventional operation with local keys
- Easy adaptation to the measuring point without calibration at the workshop
- Backdocumentation of measuring point
- Continuous self-diagnostics
- Configurable safety value
- Software lock for local keys and reconfiguration
- Approved for SIL applications
- Simulation of analog output for loop-check
- Local display in %, mA or physical units
- Signal noise suppression by Smart Smoothing
- Linear or customized characteristic
- Process temperature from -50 °C to $+120\text{ °C}$
- Materials for use with aggressive media
- Micro sintermetal sensor technology
- Separate mounting of sensor and amplifier with remote amplifier mounting kit

CONTENTS

CHP.	CONTENTS	PAGE
1	DESIGN	3
2	METHOD OF OPERATION	3
2.1	Measuring principle	4
2.2	Block diagram with PROFIBUS	5
2.3	Block diagram with FOUNDATION Fieldbus	5
2.4	Block diagram with HART / FoxCom	6
2.5	Explanations to Block diagrams	6
3	IDENTIFICATION	10
	Nameplates	
4	MOUNTING	11
4.1	Mounting on top of the vessel	11
4.2	Mounting on the side of the vessel	11
4.3	Transmitter mounting	12
4.4	Kit for Remote Mounting	12
4.5	Displacer 104DE	13
5	ELECTRICAL CONNECTION	14
5.1	Signal wire connection	14
5.2	Ground	14
6	COMMISSIONING	15
7	DECOMMISSIONING	15
8	CALIBRATION OF TRANSMITTER	16
8.1	Hardware write protection	17
8.2	Calibration via local keys	17
	Setting of Upper and Lower Range Value	18
8.3	Calibration via Display Keys	19
8.4	HART / FoxCom	20
8.5	PROFIBUS	26
8.6	FOUNDATION Fieldbus	32
9	DIMENSIONING OF DISPLACER	38
10	DIMENSIONS	40
Appendix		
11	SUPPLY OF TRANSMITTER	42
11.2	HART / FoxCom	42
11.3	PROFIBUS-PA	44
11.4	FOUNDATION Fieldbus	44

Further documentation:

Master Instruction
MI EML0610 B-(en) / MI EML1610 B-(en)
144LD / 144LVD
Intelligent Buoyancy Transmitters
Communication with HART Protocol

Master Instruction
MI EMO0110 A-(en)
HT991 Universal Hand terminal for HART Devices

Master Instruction
MI EMO0120 A-(en)
ABO991 Display and User Interface for HART devices
WPP991 Write Protection Program

Master Instruction
MI EML0610 C-(en) / MI EML1610 C-(en)
144LD / 144LVD
Intelligent Buoyancy Transmitters
Communication with FOXCOM Protocol

HHT Instruction Book 3372
I/A Series Hand Held Terminal


PC10 Instruction Book 3466
Intelligent Transmitter Configurator

1 DESIGN

The transmitter is based on a modified differential pressure measuring cell.

The sensor is a flexure beam, which is mechanically linked to the measuring diaphragm, so the measuring cell also can

be used for force measurement. The static pressure effects both sides of the measuring cell and does not influence the measurement.

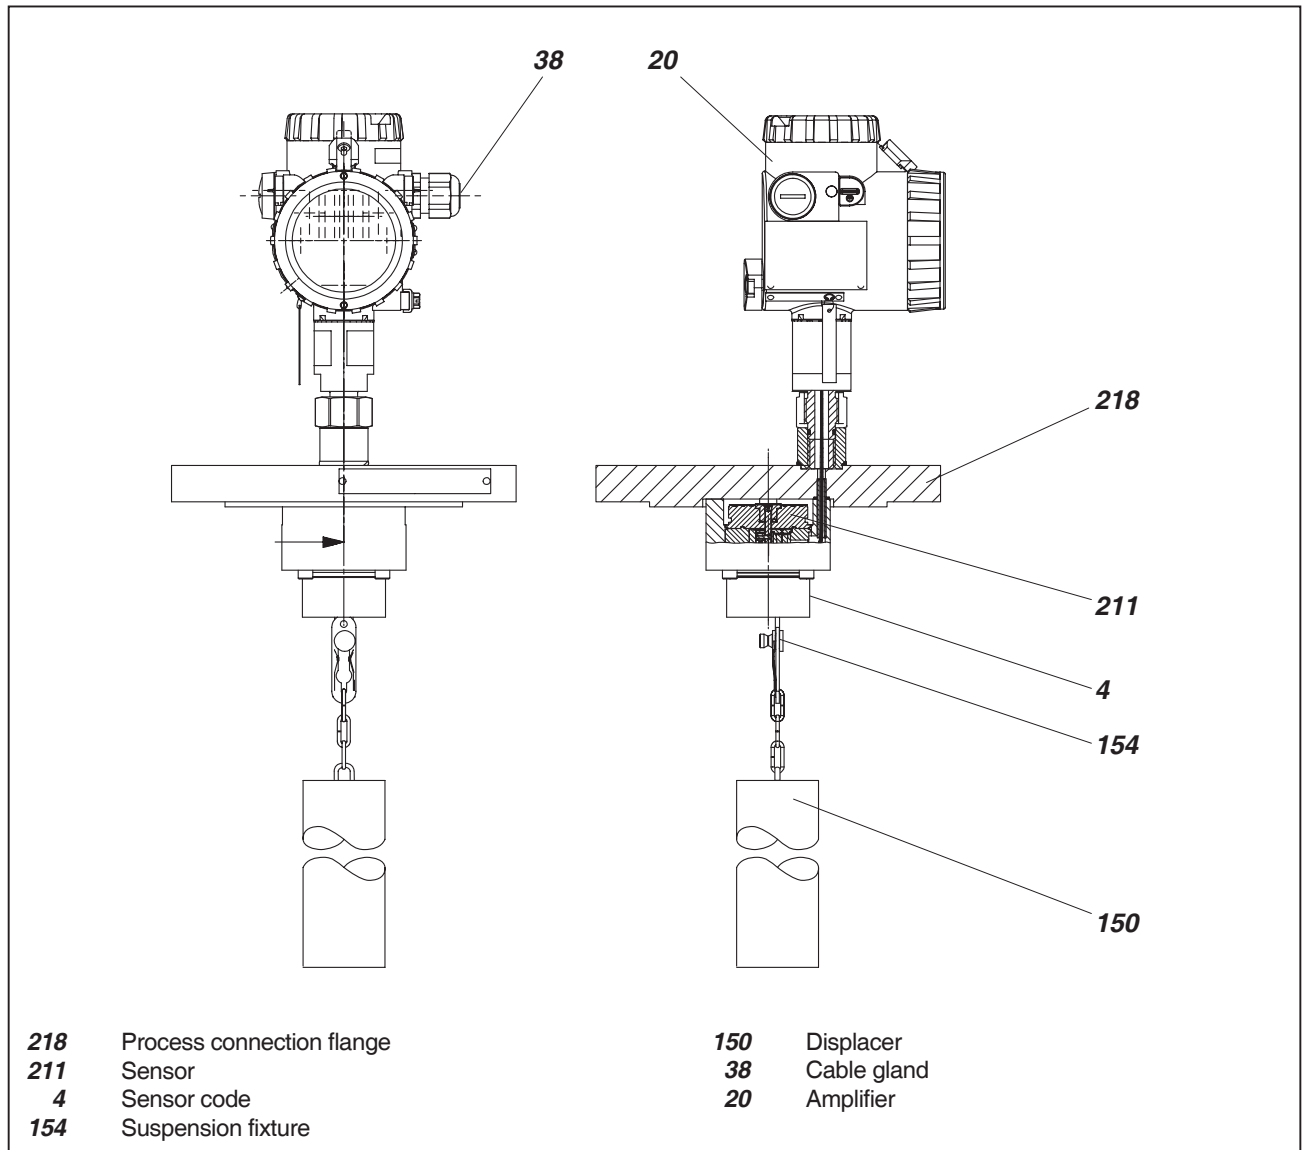

2 METHOD OF OPERATION

The buoyancy force of the displacer acts directly on the flexure beam.

Four thin film metal resistors are sputtered onto the sensor element, which change their resistance in the ratio of the tensile or pressure tension. These four thin film metal resistors are connected as a Wheatstone full bridge supplied from amplifier.

The voltage at the diagonal bridge section which is proportional to the effective weight is fed to the electronic amplifier as an input signal. The amplifier converts this voltage into a digital signal.

The supply of device comes from the signal loop circuit.

2.1 Measuring principle

(see VDI/VDE Guideline 3519, sheet 1)

Any body immersed into a liquid is subject to Archimedian buoyancy force which depends on the liquid density. This is exploited to determine liquid level, density and interface level by suspending a displacer with constant cylindric shape into a liquid.

Changes in buoyancy forces are proportional to liquid level changes and are converted to a measuring signal.

The displacer is fully immersed for density and interface level detection. It is important that the position of the displacer changes as little as possible over the measuring range.

The following applies in general to the buoyancy force acting on the displacer:

$$F_A = V_x \cdot \rho_1 \cdot g + (V - V_x) \cdot \rho_2 \cdot g$$

F_A Buoyancy force

V Volume of displacer

V_x Volume of medium displaced by measuring body with density ρ_1


ρ_1 Average density of heavier medium

ρ_2 Average density of lighter medium


g Local acceleration due to gravity

F_G Displacer body weight force


The force acting on the transmitter is inversely proportional to liquid level changes.

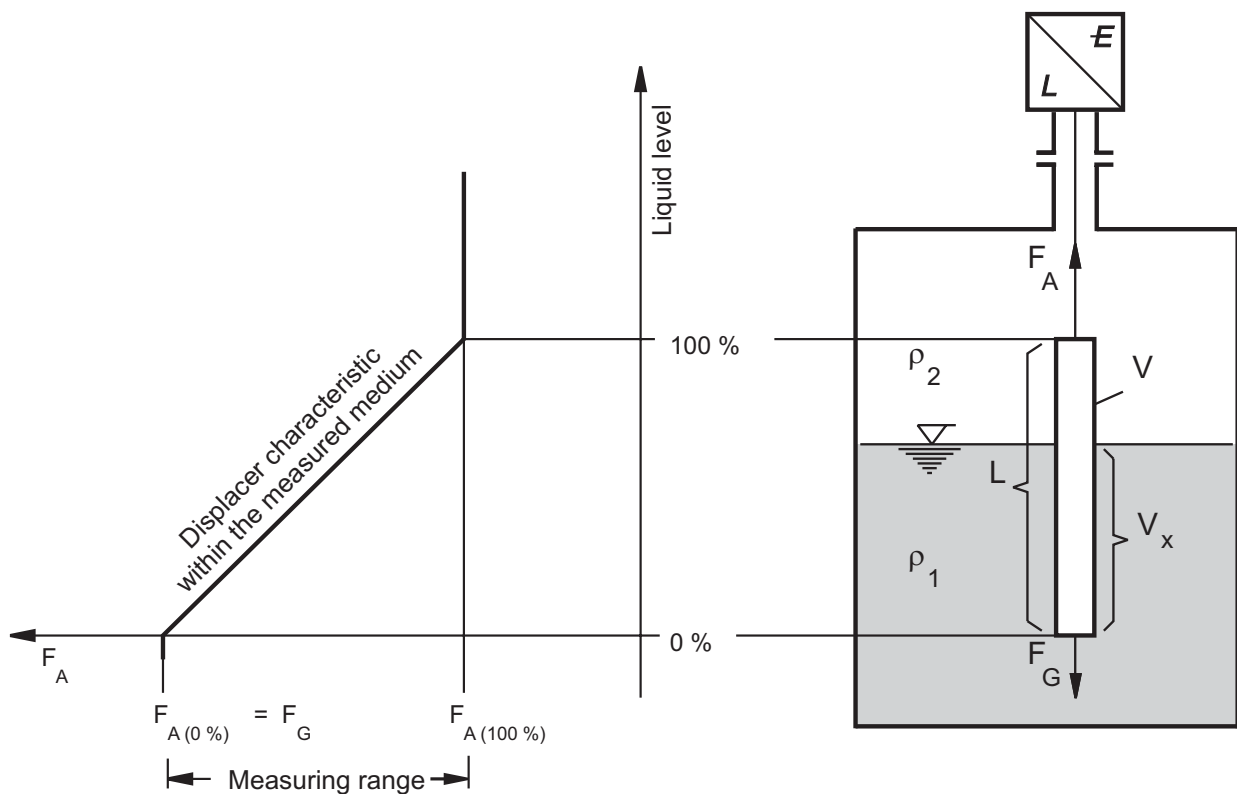


2.2 Block diagram with PROFIBUS

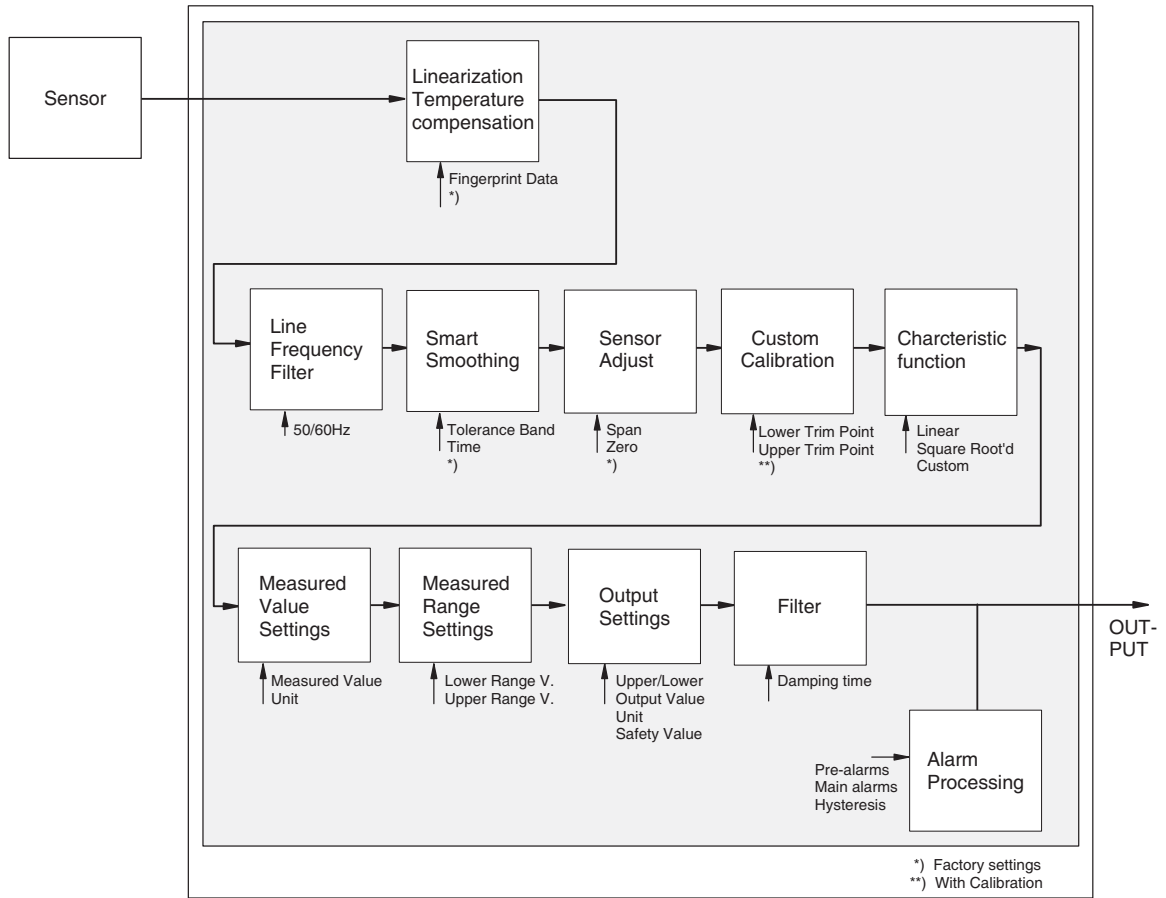

2.3 Block diagram with FOUNDATION Fieldbus

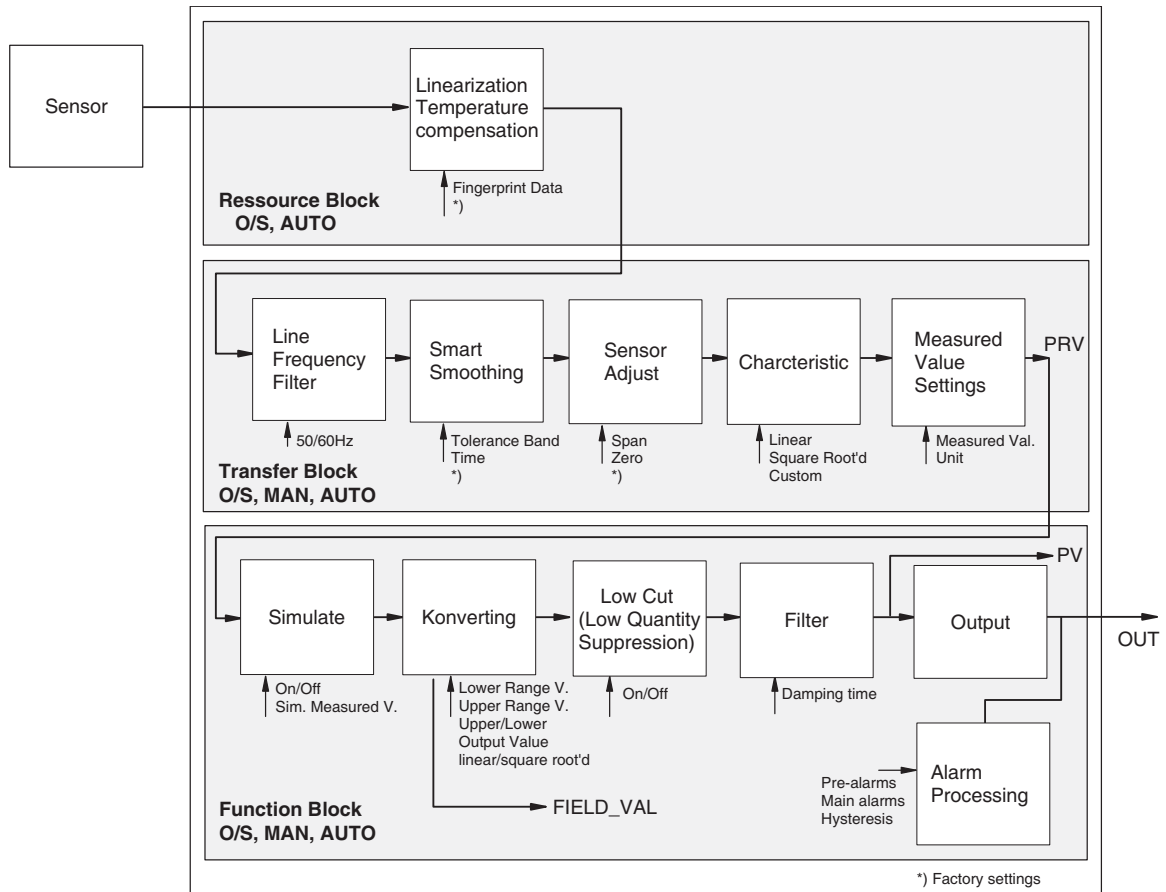

2.4 Block diagram with HART / FoxCom

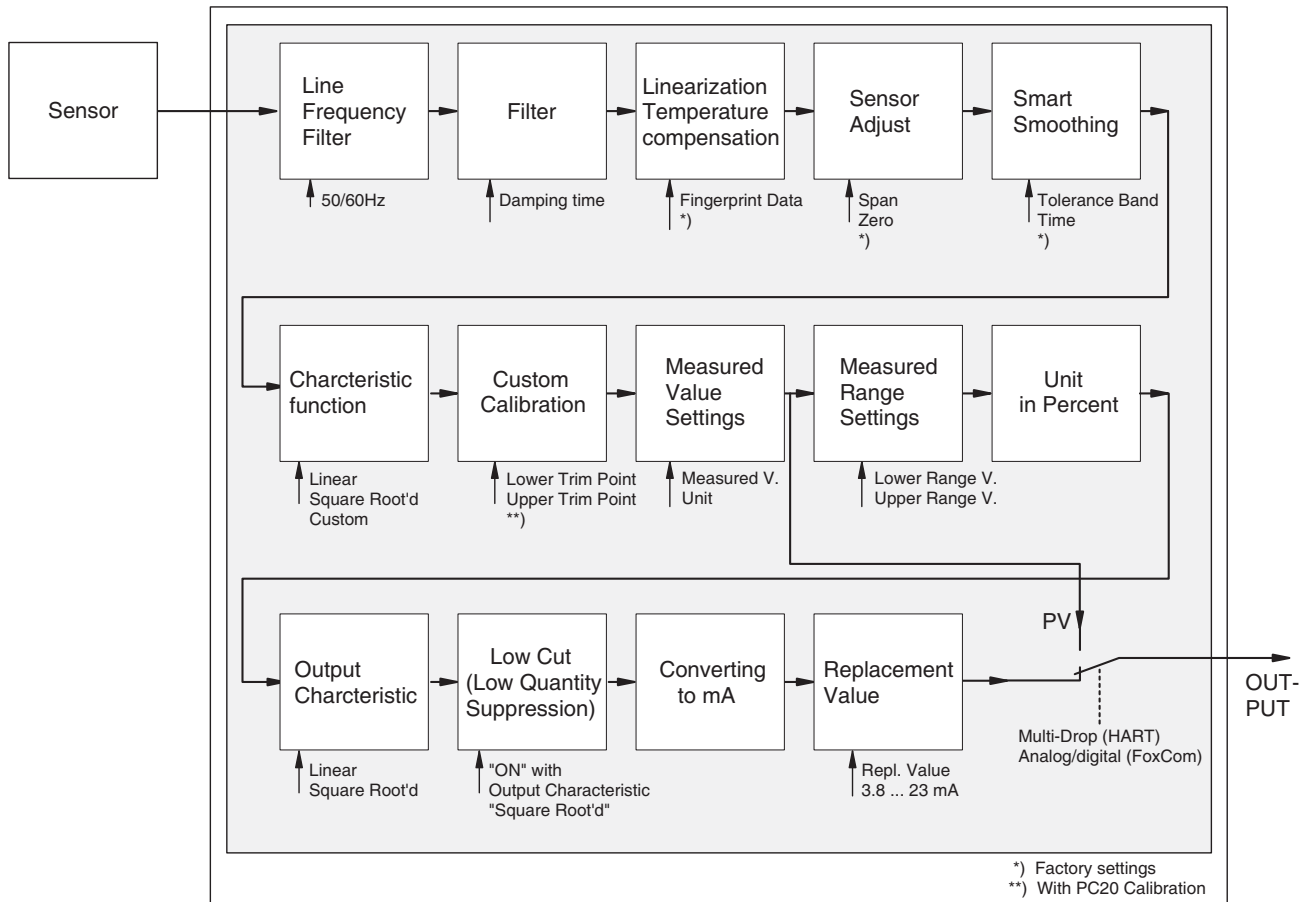

2.5 Explanations to Block diagrams

Sensor


The force sensor is a Wheatstone bridge of four metal strain gauge elements and a Ni100 resistor for temperature measurement. For calibration the sensor is loaded with weights, in order to determine the characteristic of the sensor. The Lower Range Value is determined by a small buoyancy force (high weight), Upper Range Value by a larger buoyancy force (lower weight).

Linearization and Temperature compensation of Sensor characteristic

The sensor signal is linearized and temperature-compensated by the included sensor temperature. Linearization takes place via the so-called fingerprint data, which are determined during the production for each sensor. In factory the fingerprint data are loaded into the amplifier.



Line Frequency Suppression Filter

There is the selection to filter the noise signal 50 Hz or 60 Hz.

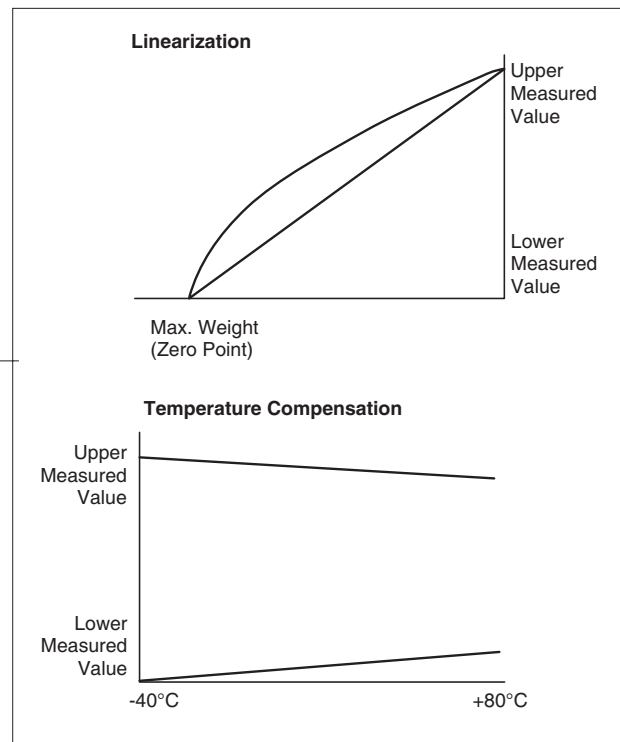


Smart Smoothing

In factory the Smart Smoothing Band is set to 0.15 % of sensor range. The Integration Time of the average value is set to 10 sec.

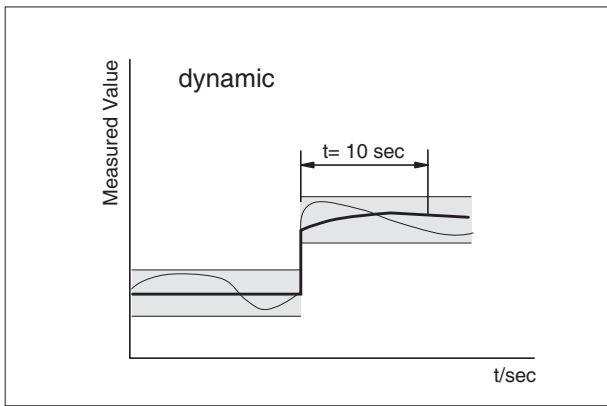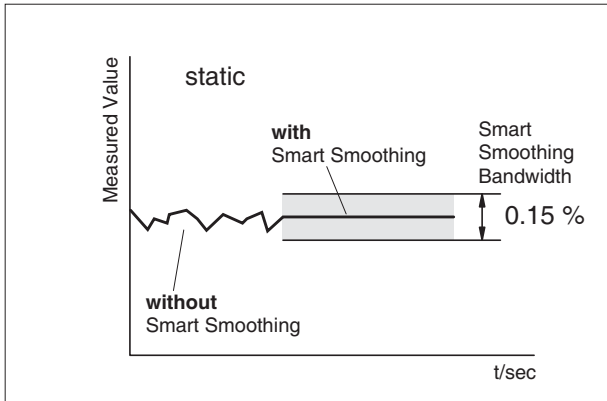


Sensor Adjustment

Zero and span of force sensor are adjusted in factory. It is possible to calibrate Zero (situation alignment) with the external 0% key (see 8.2).

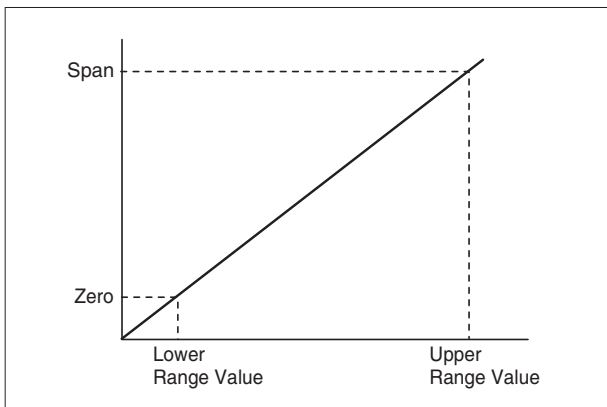

Custom Calibration (not with Foundation Fieldbus)


The user has the possibility with this function of calibrating the transformer according to his conceptions. By giving of a lower and upper measured value the transfer characteristic is again adjusted. This custom calibration can be reset to factory calibration.

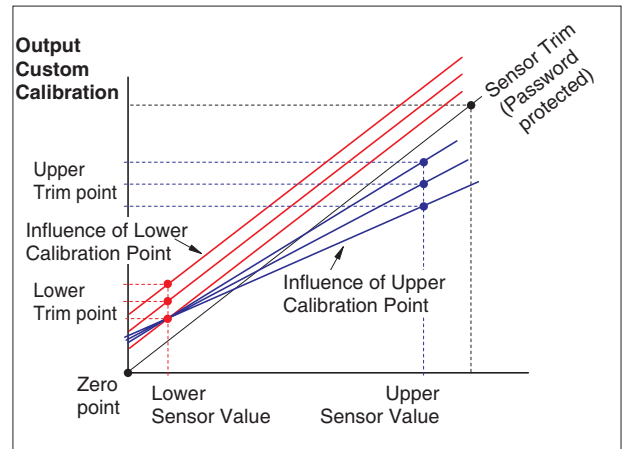

We only recommend a custom calibration with either lower plus upper calibration or an exclusive upper calibration.


Transfer function / Characteristic

The characteristics are available linear, root-extracted and customized. With "customized" there are 32 x/y- values available. Standard with Level is "linear".

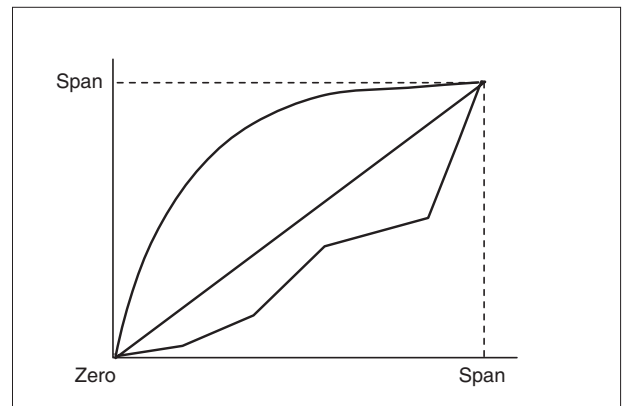


Measured Value Setting

The user can define measured value and unit.

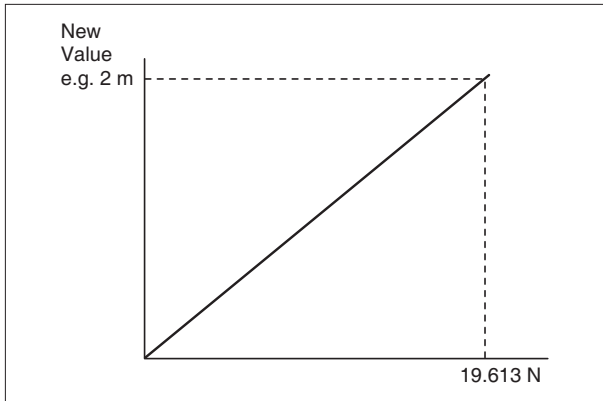


Setting of Range (not with Foundation Fieldbus)

The measuring range is the range between Lower Range Value and Upper Range Value. Lower Range Value is the weight of the displacer. Lower Range Value without elevation is 0. With elevation, the value of elevation has to be entered.

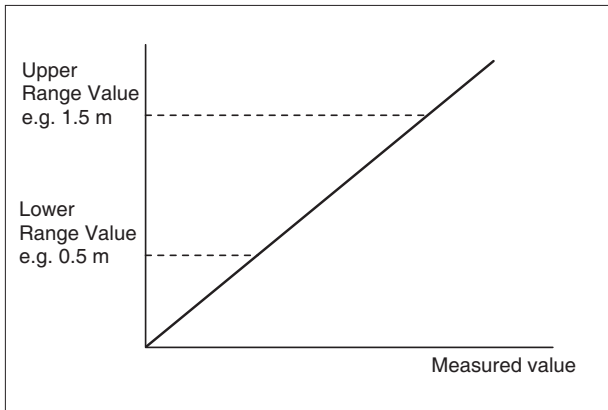

Setting of Output value

The output value is the measured value between Lower Range Value and Upper Range Value. Value and unit are freely selectable. The replacement value affects the output.

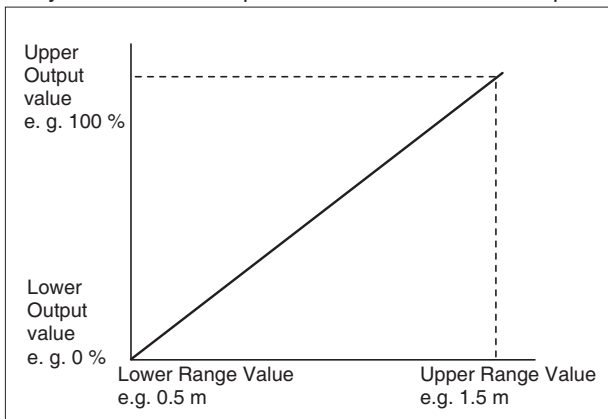

Simulate (only FOUNDATION Fieldbus)

After setting a flag it is possible to simulate the measured value with a FOUNDATION Fieldbus Configurator.

Convert (only FOUNDATION Fieldbus)



Lower/Upper Range Value and Lower/Upper Output Value are freely configurable for value and unit. The measuring range is the range between Lower Range Value and Upper Range Value. The output value is the measured value between Lower Range Value and Upper Range Value. The output value can be root-extracted.

One configures which values are set to the output value and the measured value (primary variable PV). There are following configuration possible;

- OUT/PV = measured value
- OUT/PV = Output
- OUT/PV = Output, root-extracted

The difference between OUT and PV is: With OUT is an Alarm processing but not with PV.

FIELD_VAL is measured value in %.

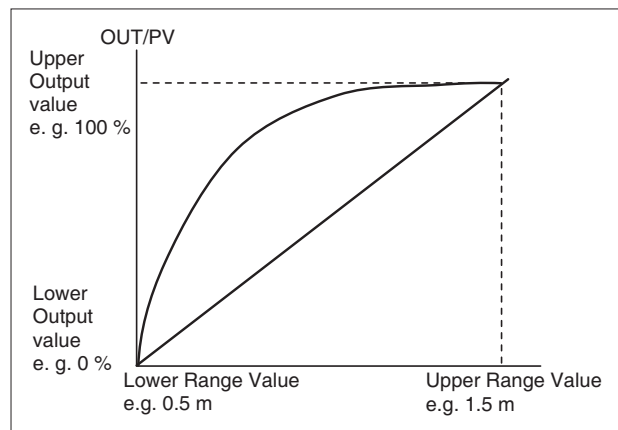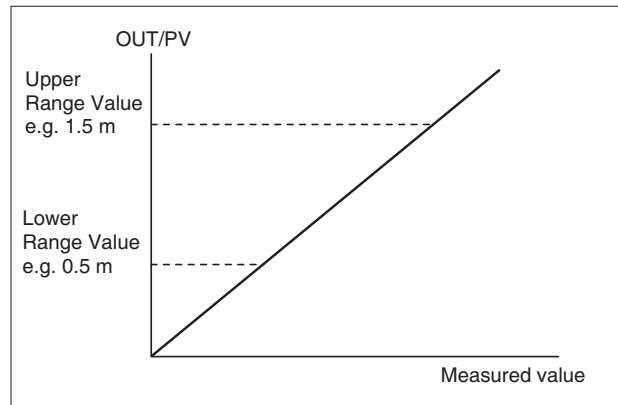

Low Quantity Suppression (not with PROFIBUS)

Setting On or Off for low quantity suppression with root-extracted output. With Level, low quantity suppression is always 0.

Output characteristic (only with HART / FoxCom)

The Output characteristic can be root- extracted.

Replacement / Substitute Value (only HART / FoxCom)

In case of error output holds last value or gives a configurable Replacement value.

If the error does not exist any longer, then "last value" and/ or replacement value is taken back (automatic or manuell).

Multi-drop (only HART)**Analog/Digital Output (only FoxCom)**

With PC20 or a Hand Held Terminal it is possible to switch - HART-Amplifier between "analog" and "Multi-drop"
- FoxCom-Amplifier between "analog" and "digital".
With HART-mode "Multi-drop" the output has a digital signal, the measured value is modulated to a 4 mA DC signal.
With FoxCom-mode "digital" the measured value is modulated to a 12 mA DC signal.

PC20 Software enables to simulate the measured value and to write output values directly to the output.

Filter

The output signal is damped; damping time ist setable from 0 to 32 sec (90%).

Alarm processing (not with HART / FoxCom)

The output signal is supervised by lower and upper pre- and main alarm limits and hysteresis.
With exceeding of the alarm limits the status of output signal is set to alarm (PROFIBUS see TI EML 0610 P or Foundation Fieldbus TI EML0610 Q).

Mode (here: PROFIBUS)

With Configurator the block mode can be switched to AUTO, OUT OF SERVICE (O/S) and MAN.

In AUTO the block receives the measured values of the sensor and sends it after calculating by configuration to the output.

In O/S the block is out of service. This is the case if e.g. new parameters are sent by the Configurator.

In MAN the sensor is switched off. The output can be written directly by the Configurator.

Mode (here: FOUNDATION Fieldbus)

Each sub block (Resource block, Transfer block, Function block) has own modes.

AUTO is normal operation. In AUTO the block receives a value from input, calculates the new value and stores it to the output.

In O/S the block is out of service. This is the case if e.g. new parameters are sent by the Configurator.

In MAN the block input is switched off. The output can be written directly by the Configurator.


FURTHER INFORMATIONS**PROFIBUS**

Profibus-PA Profile for Process Control Device
Communication with Profibus TI EML 06108 P

FOUNDATION Fieldbus

FOUNDATION Specification Transducer Block Application
Process
FOUNDATION Specification Function Block Application
Process
Communication with FF-Fieldbus TI EML 06108 Q

3 IDENTIFICATION

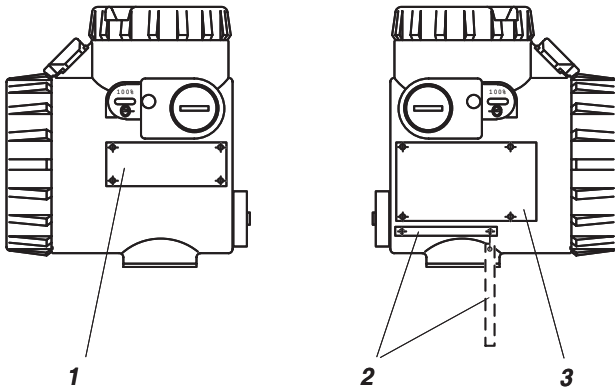

The transmitter is identified with several labels. The transmitter nameplate **1** shows the Model Code of transmitter, which clearly describes the device. The certificate data and the serial No. are shown on the amplifier nameplate **3**. The optional TAG No. label **2** with the Tag No. is located underneath.

Data about sensor and displacer are on the data label **4** on the process connection flange. ATEX-certified transmitters have an additional sensor label **5**.

Transmitter nameplate 1

(Example)

MESSUMFORMER / TRANSMITTER	
MODEL	
ECEP	REV.Nr. (4)

ECEP: ID No. for special version
Option Overfill protection acc. to WHG

Tag No. label 2

(Example)

Directly fixed or attached

LID 09/16

Optional label with devices acc. to NACE-Standard. With attached Tag No. label, on the rear side of Tag No. label.

Displacer and pressure rating 4

(Example)

Application nameplate mounted at the circumference of the process connection flange. Nominal pressure and displacer specifications are indicated on this label.

VERDRÄNGER DISPLACER	L	4500	mm	Made in Germany by FOXBORO-ECKARDT GmbH D-70376 STUTTGART	SER.-Nr.	99/887766	PN	class 1500	P-TEST	357,5	bar	JAHR	2002
	V	10268	cm ³			DRUCK-TEMP-BEREICH PRESSURE-TEMP-RATINGS		-50 +10		100	°C		VOLUMEN
(2)	F	180	N	FOXBORO ECKARDT	invensys							MATERIAL	1.4404

Amplifier nameplate 3

(Examples)

VERSTÄRKER / AMPLIFIER		CE
EBE	SER.No.	
KOMMUNIKATION		
<input type="checkbox"/> 4 ... 20 mA	<input type="checkbox"/> FOXCOM IT1	<input type="checkbox"/> PROFIBUS acc. FISCO
<input type="checkbox"/> HART	<input type="checkbox"/> FOXCOM IT2	<input type="checkbox"/> FF FIELDBUS H1
HILFSENERGIE POWER SUPPLY	AUSGANG / OUTPUT	
invensys	Made in Germany by FOXBORO ECKARDT GmbH D - 70376 STUTTGART	FOXBORO ECKARDT

Without explosion protection

VERSTÄRKER / AMPLIFIER		CE 0102
EBE	SER.No.	
KOMMUNIKATION		
<input type="checkbox"/> 4 ... 20 mA	<input type="checkbox"/> FOXCOM IT1	<input type="checkbox"/> PROFIBUS acc. FISCO
<input type="checkbox"/> HART	<input type="checkbox"/> FOXCOM IT2	<input type="checkbox"/> FF FIELDBUS H1
PTB Nr.	ATEX	TYPE
<input type="checkbox"/> Pi <input type="checkbox"/> Ui <input type="checkbox"/> li <input type="checkbox"/> Ci <input type="checkbox"/> Li <input type="checkbox"/> Tamb siehe Betriebsanleitung see Instruction Manual		
invensys	FOXBORO ECKARDT	Made in Germany by FOXBORO ECKARDT GmbH D - 70376 STUTTGART

With explosion protection acc. to ATEX

ELECTRICAL TRANSMITTER	
SER. No.	
Factory Mutual System Approved	EXPLOSIONPROOF FOR CLASS I, DIV. 1, GROUPS B, C, D.
	DUST-IGNITIONPROOF FOR CLASS II, III, DIV. 1, GROUPS E, F, G; NEMA 4X.
	SEAL ALL CONDUITS WITHIN 18 INCHES. UNUSED CONDUIT IS TO BE SEALED WITH THE PLUG PROVIDED.
	DO NOT REMOVE COVER WHILE CIRCUITS ARE LIVE.
OUTPUT	ma TERMINAL VOLTAGE DC 12...42 V
FOXBORO ECKARDT	invensys (g) TEMP. 185° F (85°C)
CE	

With explosion protection, Type of protection
"Explosionproof" FM

(Further Amplifier nameplates, not shown)

Sensor label 5

Additional sensor label at the linking piece, with ATEX-certified transmitters

(Example)

TYP	II 2 G EEx ib/ia IIB/IIC T4/T6
FOXBORO ECKARDT	PTB 01 ATEX 2044 CE Ex
Werte siehe Betriebsanleitung/ Data see Instructions Manual	


4 MOUNTING

The transmitter is directly built onto the vessel or alternatively on a side-mounted displacer chamber 104DC. During installation, the permissible static pressure and the ambient temperature range must be observed (see chapter 3, "Identification").

Note:

Proceed with caution during all installation work.
Do not damage the diaphragm!
Do not drop the suspended displacer!
Avoid jointing!


4.1 Mounting on top of the vessel

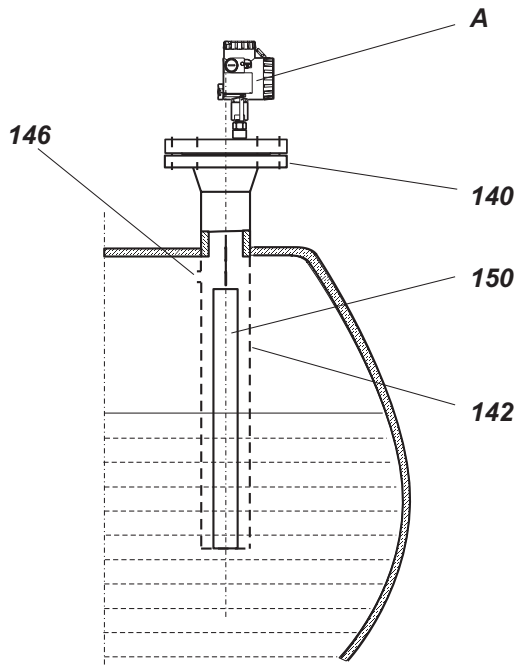

- A** Transmitter
- 140** Connection flange
- 150** Displacer 104DE
- 142** Protection cage / tube
- 146** Venting hole

If the vessel contains a turbulent liquid a protection cage / tube **142** should be used. If a tube is used, make sure there is a venting hole **146** above maximum process level. Between the protection cage / tube **142** and the displacer **150** must be a gap of at least 5 ... 10 mm.

4.2 Mounting on the side of the vessel

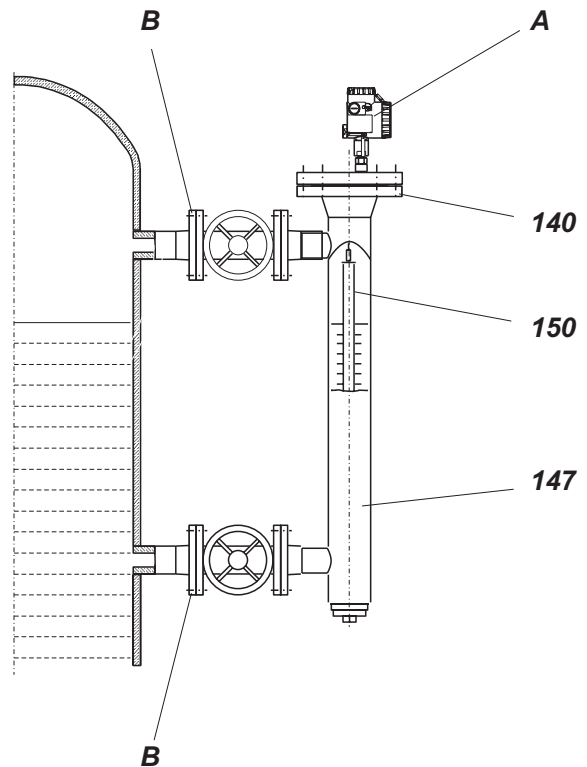

- A** Transmitter
- B** Shut-off device
- 140** Connecting flange
- 150** Displacer 104DE
- 154** Cage type 104DC

When used in Zone 0, fittings **B** resistant to flame penetration must be used.

If the chamber has not already been mounted by the customer, it must be mounted to the vessel with suitable bolts and seals (not included in the scope of delivery). Be sure that the displacer chamber is exactly vertical.

Between the chamber and the displacer must be a gap of at least 5 ... 10 mm.

NOTE:

For explosion-proof devices or devices with certification as overfill protection according to WHG, the remarks in the product specifications PSS EML1610 A-(en) and in the certificates or approvals must be observed.


4.3 Transmitter mounting

Ensure correct matching of transmitter and displacer while mounting. Each transmitter is calibrated for use with the respective displacer according to ordering data in the factory. Each displacer is marked with the TAG No. or, if not known, with the last three digits of the serial number of the respective transmitter. The corresponding displacer data (length, volume and weight) are specified on the adjustment data labels mounted on the process connection flange. See also chapter 3 "Identification".

Fit installation seal **139** on the flange **140** on the vessel side. Always use a new seal. The seal must be suitable for the flange size and the measured medium.

Attach displacer with suspension fixture **154** to transmitter. Long displacers can be placed in the container ahead of time. Multi-section displacers see chapter 4.5.

Carefully place transmitter and displacer onto the container flange **140**. Make sure the seal is accurately positioned. Avoid impacts and jolting under all circumstances. Tighten studs **142** and nuts **143**. Apply recommended torque.

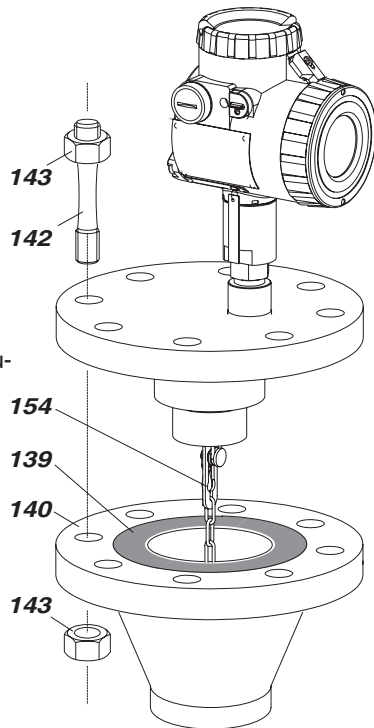

Rated pressure		Threaded bolt at rated diameter		
PN	Class	DN 80 / 3"	DN 100 / 4"	DN 70
16	150	M16	M16	–
40	300	M16 / M20	M20	–
63	–	M20	M24	–
100	600	M24	M27 / M24	–
160	900	M24	M27 / M30	–
250	1500	M27 / M30	M30 / M33	–
400	2500	M30 / M33	M36 / M39	–
500	–	–	–	M30

Recommended torque (prestressed to 70 % of minimum yield point at 20 °C)								
Mat.	Studs							
	M16	M20	M24	M27	M30	M33	M36	M39
Tightening torque [Nm]								
A2	80	150	140	210	290	330	420	560
GA	115	220	370	545	770	1000	1300	1750

4.4 Remote Amplifier Mounting Kit

Sensor and amplifier can be spatially separated and are connected by means of feeder cable (3 m or 10 m).


This is used

- if the local indicator is to be attached some Meters away from the measuring point, e.g. to make easier reading
- to protect the amplifier against extreme operating conditions.

On delivery sensor, feeder line and amplifier are assembled ready-to-install.

For wall mounting, or mounting at horizontal or vertical pipe Ø 40..64 mm the MS41-... Mounting Kit is recommended.

Remote Amplifier Mounting is not possible with electrical classification "explosionproof".

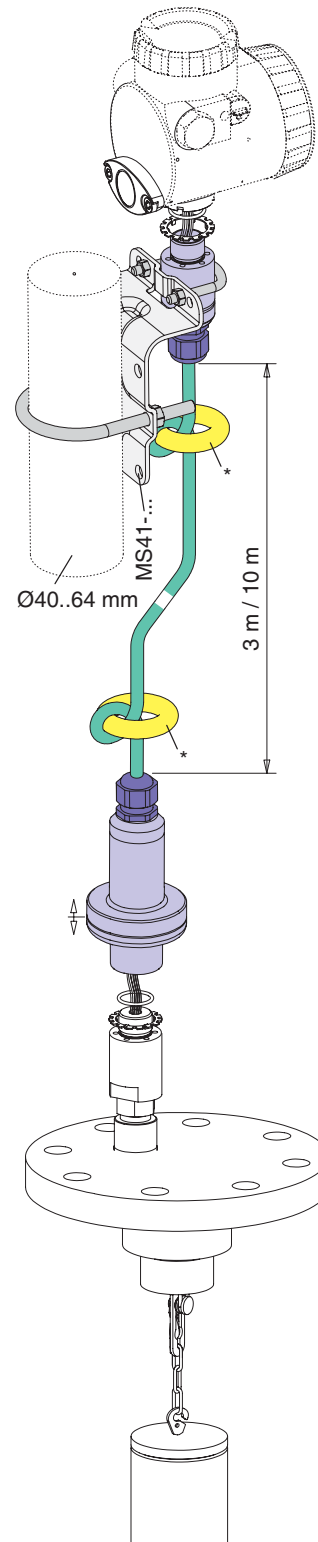

*) Ferrite rings

4.5 Displacer 104DE

Important

Displacer and transmitter must be matched properly during installation (see chapter 4.3).


Pressure Rating

The displacer must be designed for the pressure rating of the vessel - however, at least to the operating pressure - and ordered accordingly. Here the maximum possible temperature must be taken into consideration.

Displacers made of PTFE are made from solid material, and are, therefore, suitable for all pressures (see Product Specifications PSS EML0900 A).


Jointed displacer elements

Displacers of length over 3 meters are jointed (multisection) displacer elements. The displacer elements are screwed together and secured with the wire clip **151** to avoid bending or damage during insertion into the vessel. The elements of displacers with $\varnothing < 13$ mm are not screwed together; they are secured with hook and eyelet **152**. Additional securing is not necessary ¹⁾.

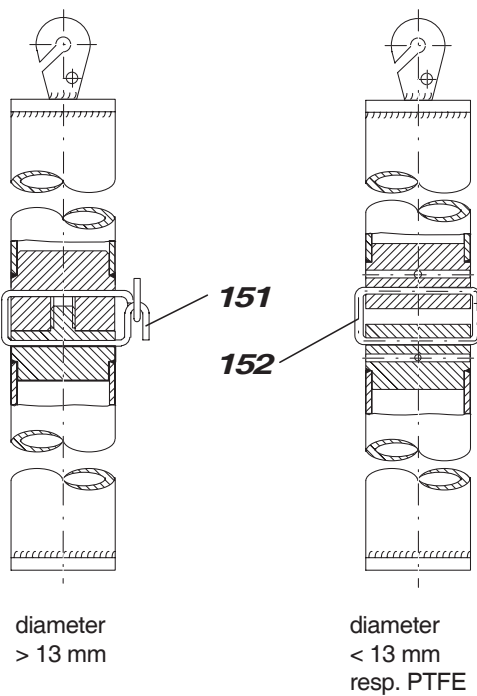

Damping element

In operating conditions with strong external vibrations - e.g. nearby compressor stations - the damping element (Option -D) should be used.

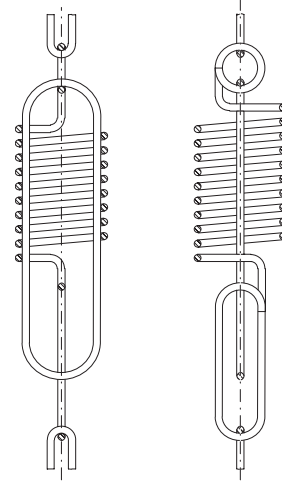

It is hooked onto the suspension chain of the displacer in place of 7 chain links (105 mm). This spring is specially matched to the resonance frequency of the displacer and is made of stainless steel (1.4310, operating temperature up to 250 °C).

Use in Zone 0 or as overfill protection according to WHG ²⁾

Mechanics

When used in Zone 0, displacers must be secured against oscillating when

- displacer made of metal, explosion group IIC
- displacer made of metal, explosion group IIB/A, length > 3 m
- displacer made of PTFE+25% carbon, IIC/B/A, length > 3 m

The displacer is to be attached in such a way that it is not in the main filling jet.

When used as overfill protection according to WHG, the displacer must always be installed with guidance. Guidance devices over 3 m long must also be secured against bending.

Potential equalization

When used in Zone 0, only displacers of metal or PTFE +25 % carbon may be used.

A potential equalization line must be mounted as an electrical bypass of the displacer suspension(s) if the residual displacer weight is < 10 N, or if more than 6 contact points are present.

To avoid the danger of electrostatic ignition, a connection to the transmitter with good conductivity must be ensured.

The volume resistance between the lower end of the displacer and ground may not exceed 1 M Ω .

1) When used in Zone 0, the eyelets must also be welded.

2) Please see corresponding certificates for further details

5 ELECTRICAL CONNECTION

5.1 Signal wire connection

Guide **cable** through cable gland **38**; observe especially the shielding.

Check before mounting cable glands if threads are matching, otherwise housing can be damaged. Cable gland **38** and cover screw **39** are interchangeable.

Connect **analog input signal** (versions HART / FoxCom) to terminals **45 (+)** and **46 (-)**.

Connect **bus signal** (versions PROFIBUS / FOUNDATION F.) to terminals **45** and **46**; no polarity has to be observed.

The screw terminals are suitable for wire cross sections of 0.3 to 2.5 mm².

The **shield** of the bus connection is

- with conducting cable glands (recommended) directly connected with the housing
- with non-conducting cable glands to be laid onto the inner screw terminal **47**.

Note: When connecting the shielded bus connections, the shielding has to be connected on both sides! (on the transmitter as well as on the panel side).

For selection of the cable see also the recommendation for cable types acc. to IEC 1158-2.


Transmitters supplied without cable gland, the cable gland used has to conform to possible Ex requirements. This is the user's responsibility.

Actions:

- Tighten cover lock **24** (if provided) and unscrew cover **22**.
- Guide cable through cable gland and connect to terminals **45**, **46** and **47**.
- If necessary connect external ground terminal **48**.
- Proper installation of cable gland has to be observed.
- Screw cover **22** and install cover lock **24** (if provided).

Note:

For explosion-proof devices follow reference for cable gland and cover screw in document "Safety Instructions 140 Series"

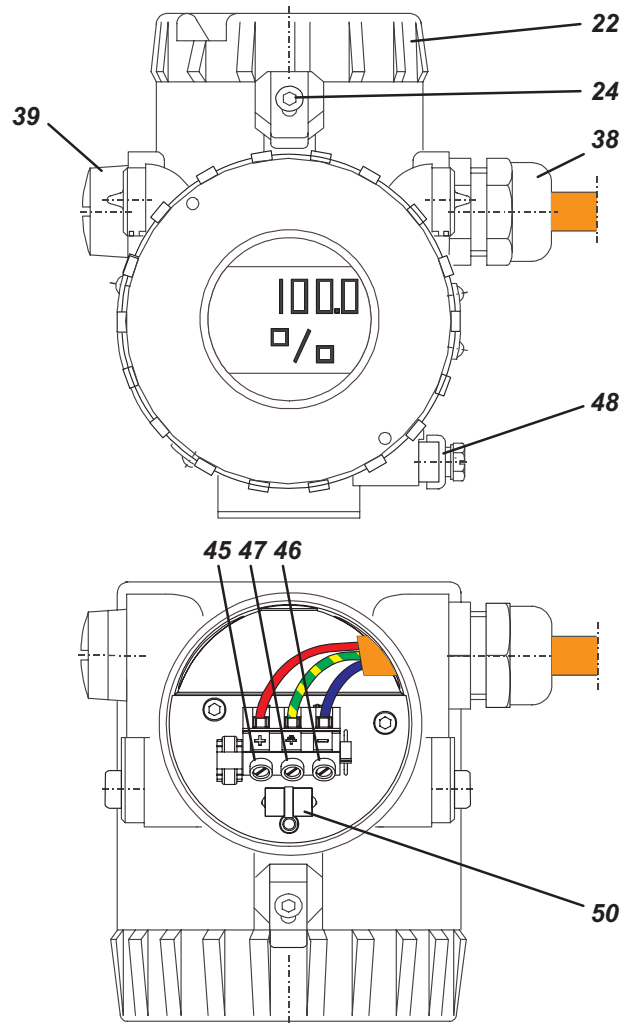

- 22** Connecting compartment cover
- 24** Cover lock
- 38** Cable gland
(permitted cable diameter 6 to 12 mm)
- 39** Cover screw
- 45** Connection terminal "+" wire cross
- 46** Connection terminal "-" section
- 47** Ground terminal max. 2.5 mm²
- Test sockets (Ø 2 mm) integrated in terminal block
- 48** External ground terminal
- 50** Overvoltage protection (if present)

5.2 Ground

If connection to ground is necessary (e.g. potential equalization, protection of electromagnetic influence), ground terminal **47** or external ground terminal **48** must be connected.

6 COMMISSIONING

In any case, installation and safety regulations have to be checked prior to commissioning. See document EX EML 0010 A: “**Safety Operating Instructions**”

After correct installation and connection to power supply unit, the transmitter is ready for operation:

$U > 12 \text{ V dc}$ (HART/ FoxCom)

$U > 9 \text{ V dc}$ (PROFIBUS / FOUNDATION Fieldbus)

If necessary the configuration of lower range value, upper range value and damping has to be checked.

With the **analog** versions HART/FoxCom an ampmeter can be attached into the output current loop for check.

Checking the settings

Checking the lower range value for level measurement

For level measurements, the weight F_G of the displacer is equal to the weight force F_0 for the lower range value (LRV). An exception is the measuring range with elevation. The lower range value (LRV) can be checked with a free-hanging displacer and a completely empty vessel.

Checking the lower range value for measuring range with elevation

The lower range value (LRV) F_0 can only be checked by specifying the vessel level corresponding to F_0 or by specifying the weight for F_0 (workshop task).

Checking the lower range value for interface and density

The lower range value (LRV) F_0 can be checked with the following methods:

- Displacer is completely immersed in the liquid with the lower density
- by specifying the weight force for F_0 with weights (in the workshop)

Upper range value

The upper range value (URV) F_{100} can be checked with the following methods:

- by producing the corresponding level, interface or density, provided the specified operating densities are correct.
- by specifying the weight force for F_{100} with weights (in the workshop).

Damping

Damping of 8 sec is set at factory. If necessary, this value can be checked on devices with an LCD indicator and changed locally.

Correction of lower range value, upper range value, damping

See chapter 8, “Setting of Transmitter”.

7 DECOMMISSIONING

Prior to decommissioning take precautions to avoid disturbances:

- Observe Ex. protection.
- Switch off power supply.
- Caution with hazardous process media!
With toxic or harmful process media, observe relevant safety regulations.

Before dismantling the transmitter, the procedure below should be followed:

- Depressurize vessel or displacer chamber.
- Drain off measuring medium in displacer chamber.
- Protect the environment; do not allow measuring substance to escape. Catch and dispose them properly.

The procedure for dismantling the transmitter is the reverse of that described for mounting.

Note:

Proceed with caution during all installation work.
Do not damage the diaphragm!
Do not drop the suspended displacer!
Avoid jointing!

8 SETTING OF TRANSMITTER

Zero, lower range value, upper range value and damping of the transmitter are set by manufacturer as specified in the order:

- Dimensions of displacer: Length, density, weight
- Setting Lower Range Value by weight F_0 :
without Zero elevation = 0;
with Zero elevation = Value of elevation
- Upper Range Value corresponding to buoyancy force of displacer (see Chap.9)
- Output Range and unit

Therefore, calibration at start-up is not necessary.

In case the order does not include this data, the transmitter is supplied as follows:

displacer weight	=	1.500 kg
buoyancy force	=	5.884 N (0.600 kg)
indication	=	0 ... 100 %
damping	=	8 sec (90 % time)

Operating data and displacer data are stored in the transmitter according to the order.


Configuration becomes necessary if this data deviates from the values stored.

The transmitter is designed for a displacer weight force of max. 4 kg¹⁾ and a buoyancy force of 2 to 20 N. The lower range value F_0 must be within the range 4 kg to 2 kg (special version 0.5 kg).

Setting via operating push buttons

Setting can be done by means of the push buttons at the transmitter if

- the amplifier housing has external push buttons **X**, see Chap. 8.2 "Setting via local keys", or
- the display has push buttons **D**, see Chap. 8.3 "Setting via Display keys".

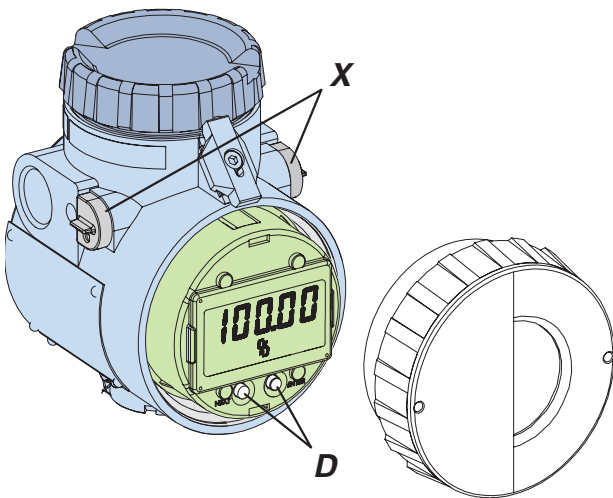

Setting via HART Protocol

- Setting with PC; Display and User Interface PC20
- Setting with Handterminal
- Basic calibration with PC20 Calibration (necessary if sensor or amplifier are changed)

Setting via FOXCOM Protocol

- Setting with PC; software PC10 / PC20
- Setting with FoxCom Hand terminal (not 144LVD starting from Ser.No. 93/...)
- I/A Series System IFDC software
- Basic calibration with PC Calibration (necessary if sensor or amplifier are changed)

Setting via PROFIBUS Protocol

- Setting with PC; Display and User Interface PC20

Setting via FOUNDATION Fieldbus Protocol

- Manufacturer's Sensor calibration (Fingerprint data, zero, span)
- Customer's settings with standard configurators, as National Instruments Configurator, Honeywell System (DCS), Siemens Delta V (Emerson), ABB


1) Attention! 1kg generates a force of 9.807 N

8.1 Hardware write protection

The write protection prevents the changing of the configuration of the transmitter. To enable writing on the transmitter, the jumper **J** has to be plugged as shown in the figure below. (Amplifier electronics, behind LCD indicator)

Note: Additional Software Write Protection can be reset / set via PC20 Software.


HART / FOXCOM:

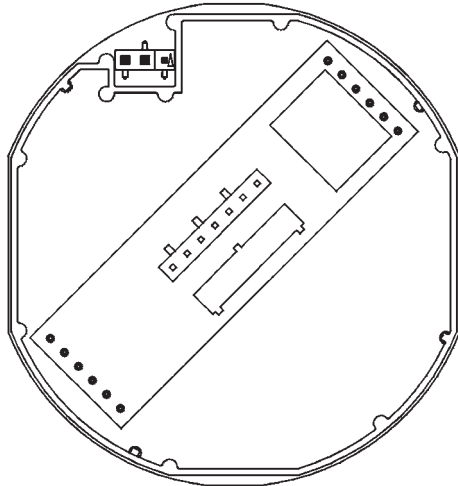


Note:

If no jumper is set, the transmitter is write protected.


Write protection

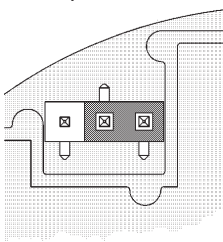

No write protection

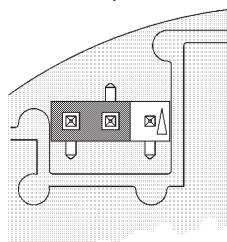

PROFIBUS / FOUNDATION Fieldbus:

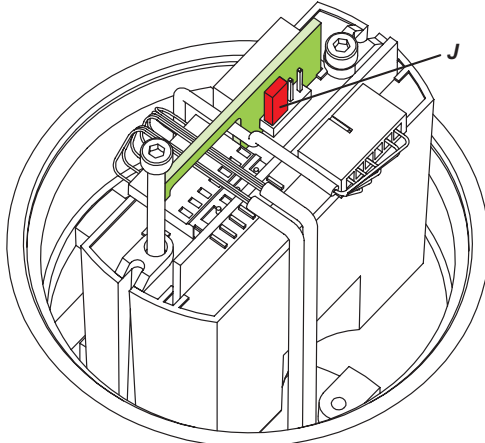

No write protection

Jumper **J** connects both left pins (as shown)

Write protection


Jumper **J** connects both right pins, or jumper is not set

8.2 Setting via local keys

Operation and functions of local keys

The two local keys 0 % and 100 % are used to set up zero, lower range value, upper range value and damping.

Amplifier housing with local keys

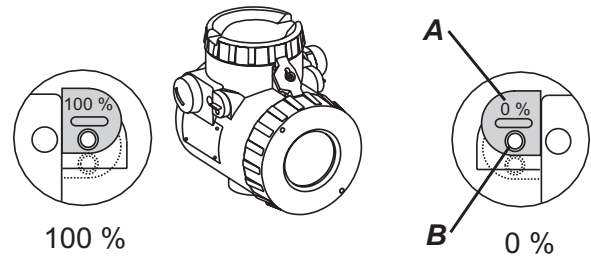

After shifting the key protection cap **A**, insert screw driver or pin ($\varnothing < 3$ mm) into hole **B** and press down to the second pressure point.

Both keys have two assigned functions, dependent on length of pressing time.

Damping ¹⁾

The damping is (electrically) set to 8 sec by manufacturer. With the local keys damping can be adjusted between 0 and 32 sec (90 % time ²⁾).

The local display shows the current damping value, when the key 100% is pressed less than 3 sec. Further acting of key 100% stepwise sets the damping.

After damping selection, confirm by short acting key 0%.

Zero, Lower range value and Upper range value
see next page

1) Damping is only adjustable with push buttons if local display is provided.

2) 63 % time with HART devices

Setup of lower and upper range value

Workshop task

Equipment:

- Power supply DC 24V, 30 mA
- Local display configured with mA¹⁾ resp. % (OUT in %) or multimeter¹⁾
- Screw driver ($\varnothing < 3$ mm)
- Set of standard weights, class M1²⁾
- Weighing pan³⁾ to be suspended in place of displacer

Actions:

- Put transmitter in operational position and connect transmitter

Setting Zero (not with FoxCom)

Zero point is factory-set. If the zero point shifted by another installation position, it can be corrected as follows:

- Put on weights for Zero point (4 kg)
- Press key 0% less than 3 sec.

With HART the output signal is set to 0 (4 mA).

Setting Lower range value

- Put on weights for lower range value (F_0)³⁾
- Press key 0% more than 5 sec
- Measuring span remains unchanged
- Indicator displays Lower range value

With HART the output current is adjusted to 4 mA.

Setting Upper range value

- Put on weights for upper range value (F_{100})³⁾
- Press key 100% more than 5 sec
- Lower range value remains unchanged
- Indicator displays Upper range value

With HART the output current is adjusted to 20 mA.

Wet calibration


If process conditions for lower range value and upper range value can be set during installation it is possible to calibrate installed transmitter.

Equipment:

- Local display configured with mA¹⁾ resp. % (OUT in %) or multimeter¹⁾
- Screw driver ($\varnothing < 3$ mm)

Actions:

- Set conditions (e. g. level) for lower range value.
- Press key 0% more than 5 sec.
- Set conditions (e.g. level) for upper range value.
- Press key 100% more than 5 sec.

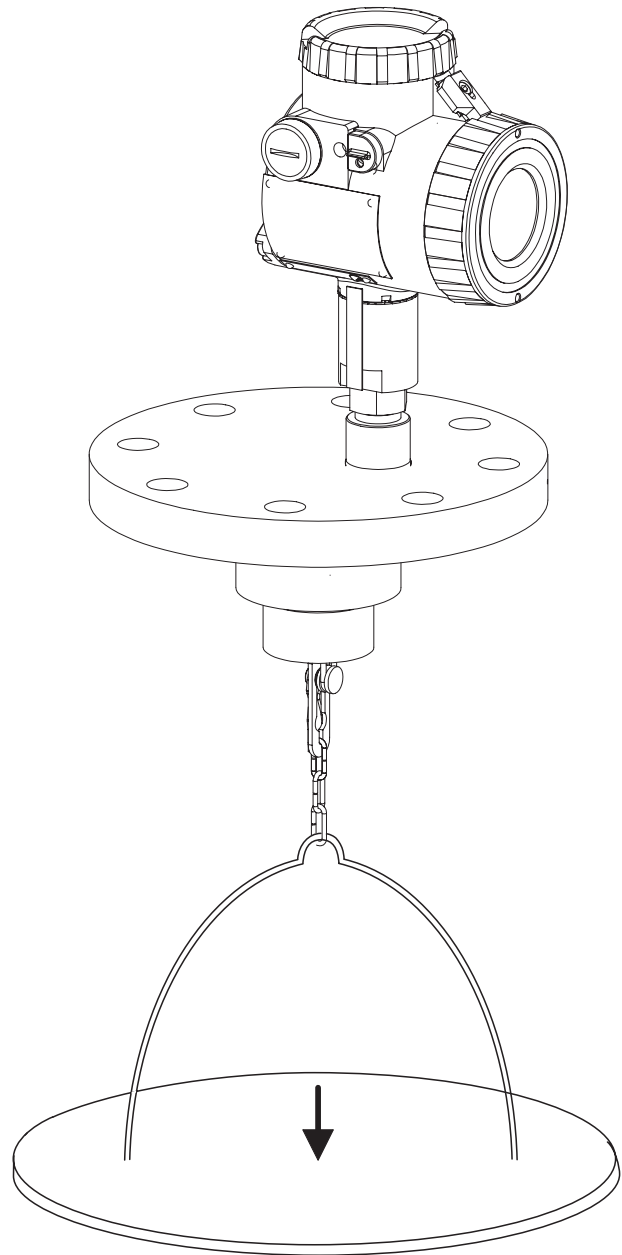

1) HART only

2) Attention! 1 kg generates a force of 9.807 N

3) The weight of weighing pan must be taken into account


8.3 Setting via Display Keys

The most important configurations and calibrations can be performed as per menu directly at the transmitter via two keys (NEXT and ENTER).

(The menu structure is identical for the 140 Series with HART/FoxCom or FOUNDATION Fieldbus/ PROFIBUS communication protocols.)

Note:


Observe limitations for opening of housing in hazardous areas. See Document "Safety Operating Instructions 140 Series".

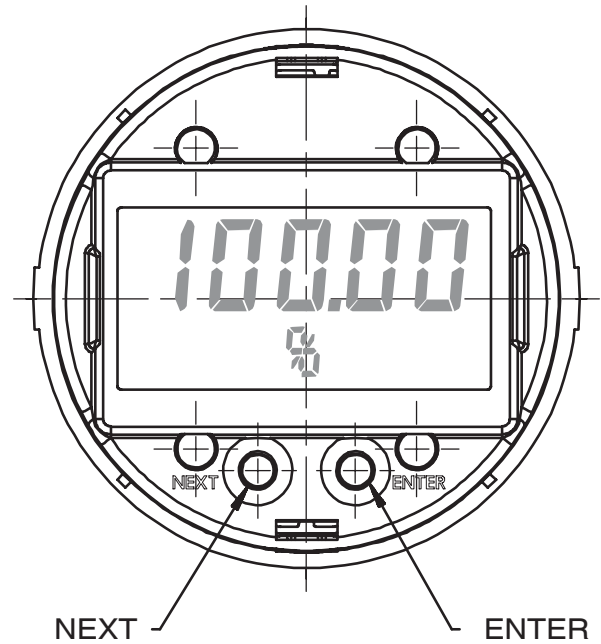

Selection in Menu

In selecting a sub-menu the presently selected menu point will be shown first. With key NEXT the following menu point is selected; it is accepted by pressing ENTER.

Numerical Input

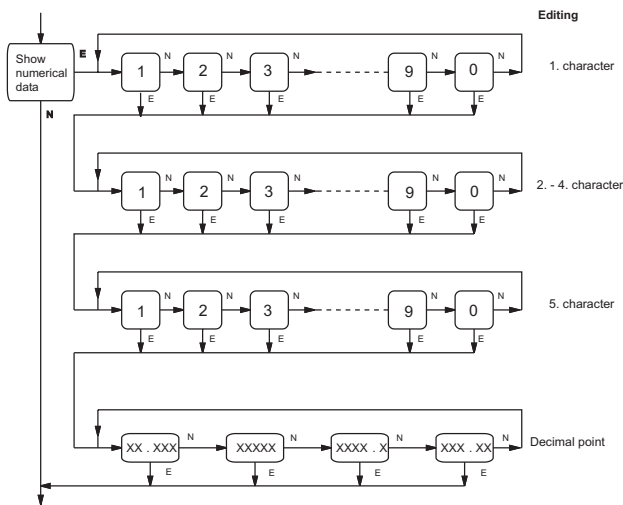

If the menu requests numerical input the current value and name are displayed.


By actuating key NEXT the menu position is exited without changing the value.

Following pressing ENTER the value may be changed by pressing key NEXT and upward counting of the blinking number ('1' follows '0'). ENTER switches to the following position.

Following change and/or activating of all characters (max. 5 digits) input of the decimal point is requested. Key NEXT relocates decimal point. By pressing ENTER the value has been transferred.

Upon transfer the value range is checked. In case of faulty input a blinking error signal is actuated for about 3 seconds (see "Error signals") and is branched to menu node "Cancel".

Alphanumeric Input

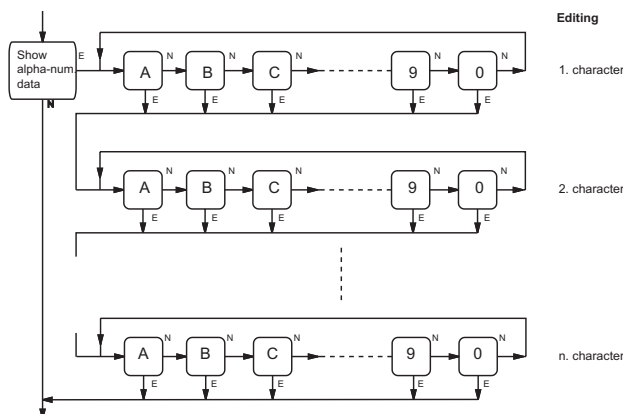

If the menu requests an alpha-numerical input, the presently selected characteristic chain is shown.

By actuating key NEXT this menu position is exited without changing the value.

Following pressing ENTER the value may be changed by pressing key NEXT and upward counting of the blinking characteristic ('A' follows '0'). ENTER switches to the following position.

Following change and/or activation of all characters (max. 5 characters) the character chain is transferred by activating key ENTER.

8.4 HART / FoxCom

Abbreviations:

E ENTER button
 N NEXT button
 (with autorepeat: i.e. long, continuous actuation corresponds to multiple single actuations)

The following abbreviations are defined in communication protocol:

HART/FoxCom:

LRL Lower Range Limit
 LRV Lower Range Value
 PV Primary Variable (measured value)
 URL Upper Range Limit
 URV Upper Range Value

A branch in the flow charts is called 'node' here.

Note: Setting with PC20 Software

Beside the in the following described settings with display keys, the PC 20-software still contains large functions (see also MI 020-495):

- Extended configuration
- Calibration of Sensor
(in the workshop, after exchanging the Sensor)
- Test of Transmitter
- Trend recording

Extended configuration with PC20 contains the access to the 32 X/Y values for the customized characteristic, the access to the alarm limits and the access to flange material and dimensions of the sensor.

In addition the mode can be switched between AUTO/MAN/O/S.

The measured value can be simulated; in Mode MAN the output can be written directly.


The calibration after exchange of the sensor contains both the transmission of the finger print data of the sensor and the sensor alignment with password.

With Test of Transmitter the recorded diagnostic data can be queried. The measured value can be simulated and the output be written directly.

With "Trend" the output of connected device is recorded and displayed.

8.4.0 Menu structure

The highest menu level offers sub-menus "Display PV", "Maintenance" and "Special".

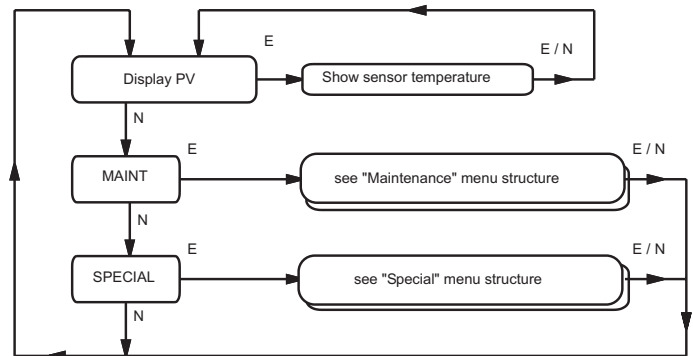


8.4.1 Menu node "Display measurement value"

After each pressing the key ENTER alternately is indicated:

- Sensor Temperature in °C or
- the value selected in Menu 8.4.3.5:
 - PV Output value and physical unit
 - PV Output value in %
 - PV Output value in mA
 - No display.

8.4.2 Menu node "MAINT"

Branching to "Maintenance" menu (no protection by password).

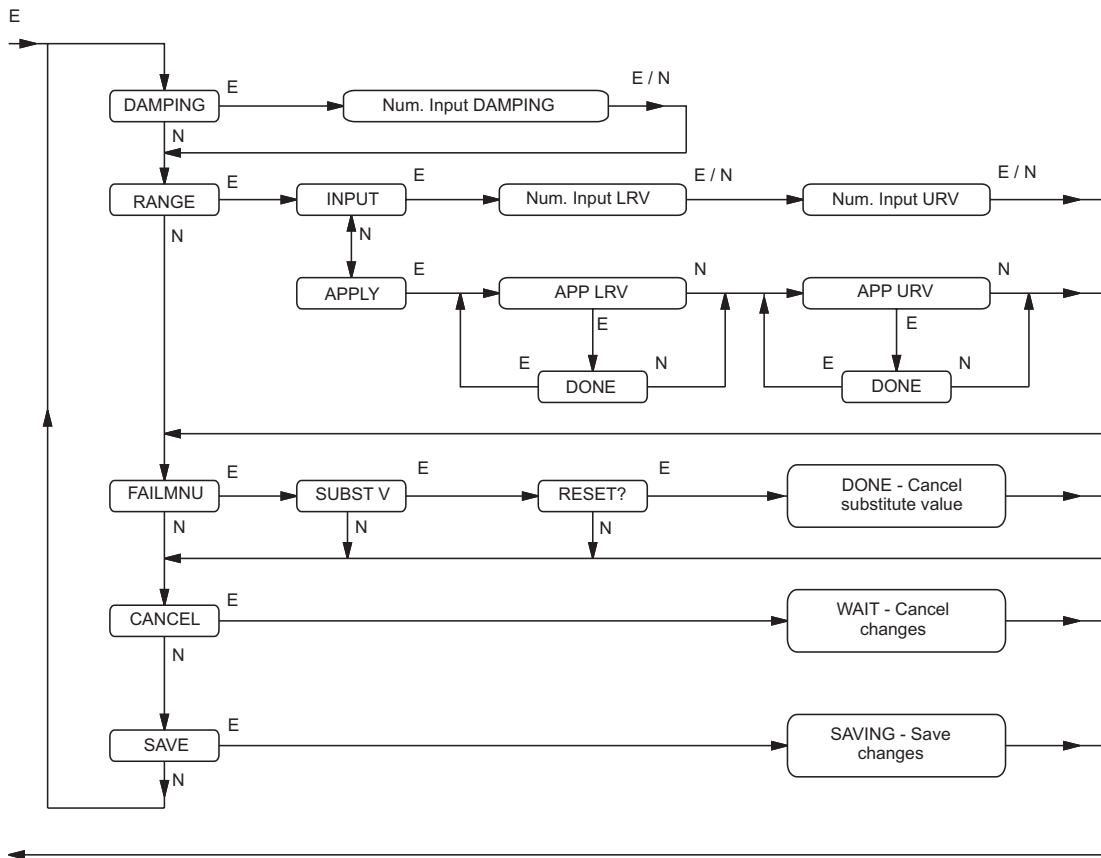

8.4.2.1 Menu node "DAMPING"

Configuration of PV damping.

Menu node "Numerical Input DAMPING"

Display / Input of PV damping (phys. unit ,SEC'). The rated value range is 0 ... 32 seconds.

8.4.2.2 Menu node "RANGE"

In node "INPUT" the configuration of Lower Range Value LRV and Upper Range Value URV is entered.

In node "APPLY" the actual current measured value is indicated and confirmed by pressing the ENTER key. The rated value range is LRL...URL.

Menu node "INPUT / Numerical input LRV"

Configuration of LRV by input. Normally 0; exception with Zero elevation.

Menu node "INPUT / Numerical input URV"

Configuration of URV by input.

Menu node "APPLY / APP LRV"

(use only with Zero elevation)

Configuration of LRV by default, the current PV is indicated. Confirm LRV by pressing ENTER key.

Menu node "APPLY / APP URV"

Configuration of URV by default, the current PV is indicated. Confirm URV by pressing ENTER key.

8.4.2.3 Menu node "FAILMNU"

Manual take back of configured substitute value.

Menu node "SUBST V / RESET?"

Manual take back of configured substitute value. If substitute value is taken back automatically this menu is out of operation.

8.4.2.4 Menu node "CANCEL"


By pressing ENTER key all changes are cancelled.

8.4.2.5 Menu node "SAVE"

By pressing ENTER key all changes are stored.

8.4.3 Menu node "SPECIAL"

Branching to "Special" menu. In difference to the "Maintenance" menu it is possible to make extensive configurations. Optional it is possible to configure password protection.

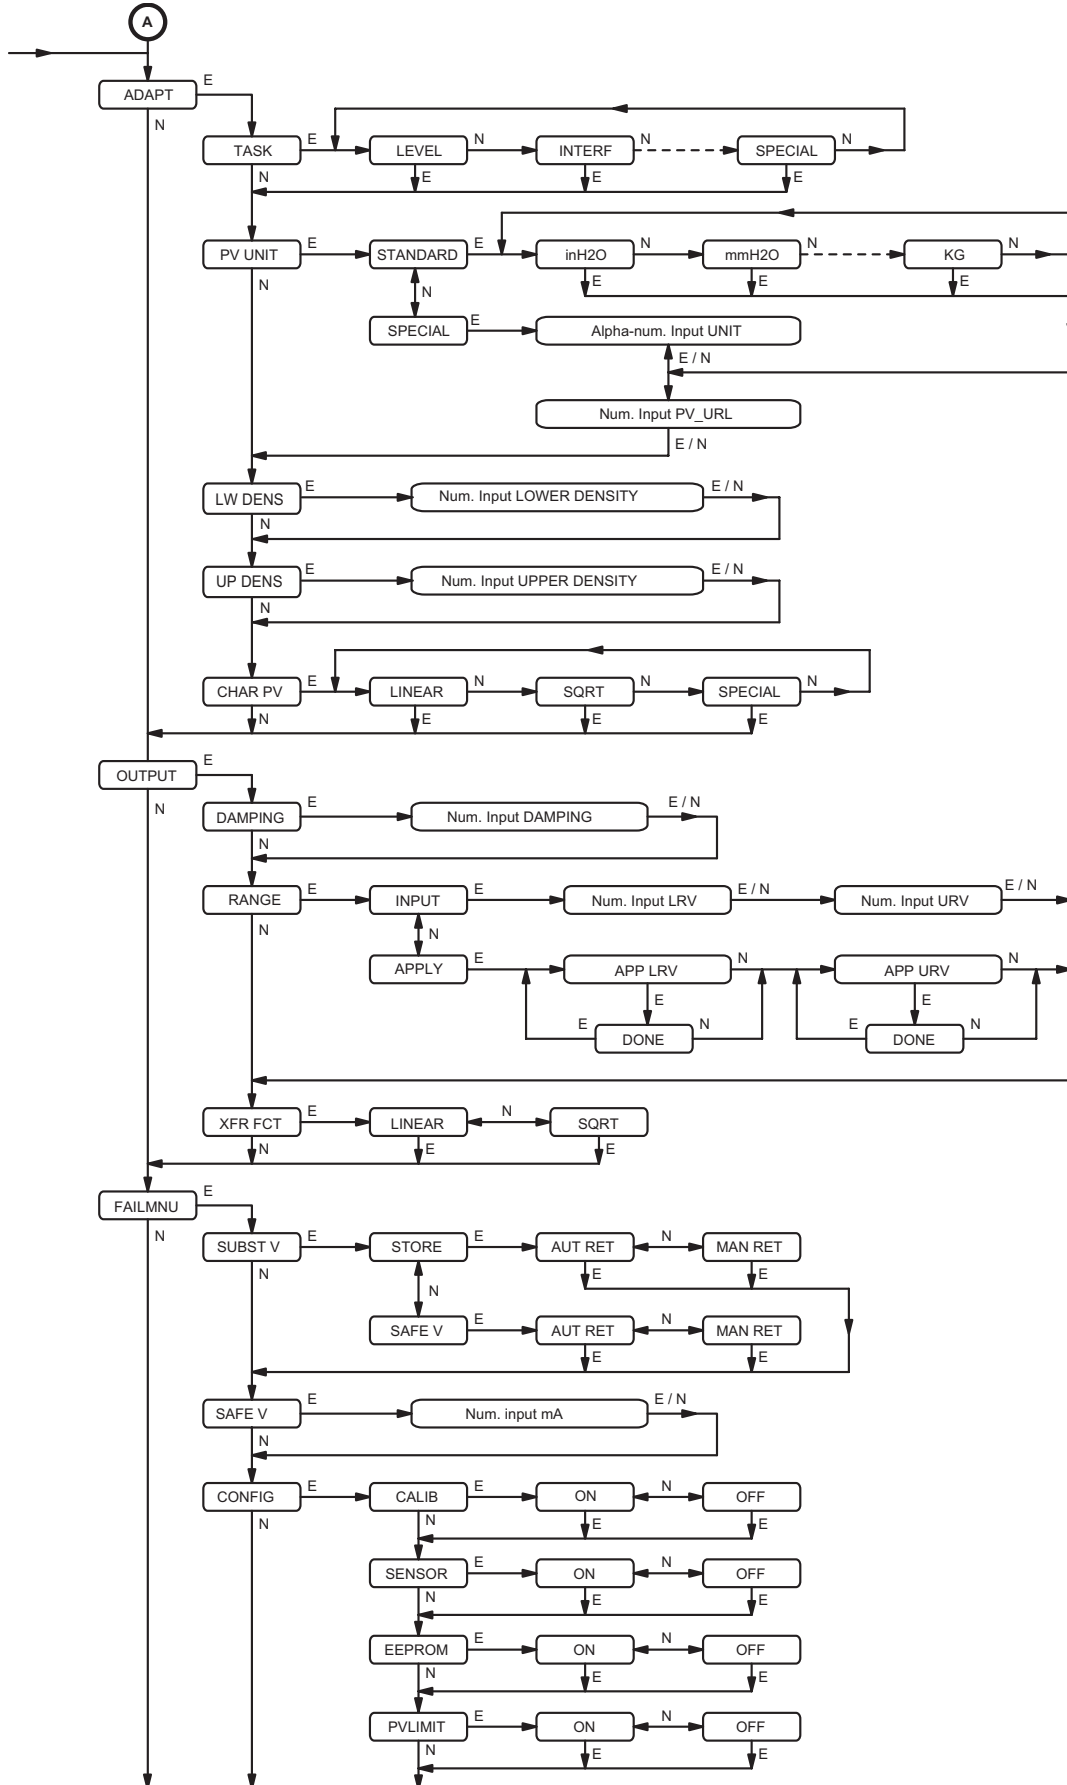

8.4.3.1 Menu node “ADAPT”

Branching to configuration for adaptation of sensor measurement value.

Menu node “TASK”

Configuration of measurement task. Selection of measuring task in menu. The configured measuring task is of a purely informative character and has no effect on the functionality of the transmitter.

Menu node “PV UNIT / STANDRD”

Configuration of standard unit for PV. Selection of the unit in menu. If the new unit can be derived from the old one (e.g. mbar to bar) or if there is a change from unit ‘%’ to a pressure unit, an implicit conversion from LRV and URV takes place. In case old and new units are not identical, URL is set to 0 and has to be entered.

Menu node “PV UNIT/ SPECIAL”

Configuration of a special unit for PV. It is possible to define a unit with max. 5 characters (see chap. “Alpha-numeric input”). The Upper Range Limit URL is set to 0 and must be entered.

Menu node “LW DENS” and “UP DENS”

Configuration of density (lower and/or upper density) of the measuring product. The configured density is in the unit ‘kg/m³’ and is of a purely informative nature having no effect on the functionality of the transmitter.

Menu node “CHAR PV”

Configuration of transmitting characteristic of PV. Selection of characteristic in the menu.

LINEAR – linear characteristic

SQRT – square-root extracted characteristic

SPECIAL – customized characteristic

Value pairs X/Y associated with characteristic ‘SPECIAL’ cannot be entered via display menu; input via PC20.

8.4.3.2 Menu node “OUTPUT”

Configuration of Output of transmitter.

Menu node “DAMPING” and “RANGE”

see “MAINT”.

Menu node “XFR FCT”

Configuration of the transfer function of the current output. Selection of transfer function in menu: linear (LINEAR) and square-root extracted (SQRT).

8.4.3.3 Menu node “FAILMNU”

Configuration for the behavior in case of an error.

Menu node “SUBST V / STORE”

Configuration of the behavior during ‘Store last Value’. In case of an error, the transmitter maintains the last valid output current until the error is eliminated (automatic return, AUT RET) or until the substitute value is manually returned (MAN RET).

Menu node “SUBST V / SAFE V”

Configuration of the behavior of the substitute value. In case of an error, the transmitter changes the output current to a configured substitute value and maintains the output current until the error is eliminated (automatic return, AUT RET) or until the substitute value is manually returned (MAN RET).

Menu node “SAFE V”


Configuration of the substitute value. The permissible value range is 3.6 to 23 mA. This value is of significance only if the “Substitute value” is configured instead of ‘Store last value’. During an error this configured value becomes the output current of the transmitter.

Menu node “CONFIG”

Branching for configuration of malfunctions messages. There are seven areas where a malfunction signal can either be activated (ON) or suppressed (OFF).

- | | |
|------------|---|
| 1. CALIB | Internal calibration failed |
| 2. SENSOR | Sensor value of ± 150 % of nominal range |
| 3. EEPROM | Write EEPROM impossible |
| 4. PVLIMIT | PV ± 110 % of nominal range |
| 5. SENTEMP | Sensor temperature out of limits |
| 6. EL TEMP | Electronic temperature outside
– 45 °... 85 °C |
| 7. RANGE | Configured measuring range invalid |

Menu node "SPECIAL" (continued)

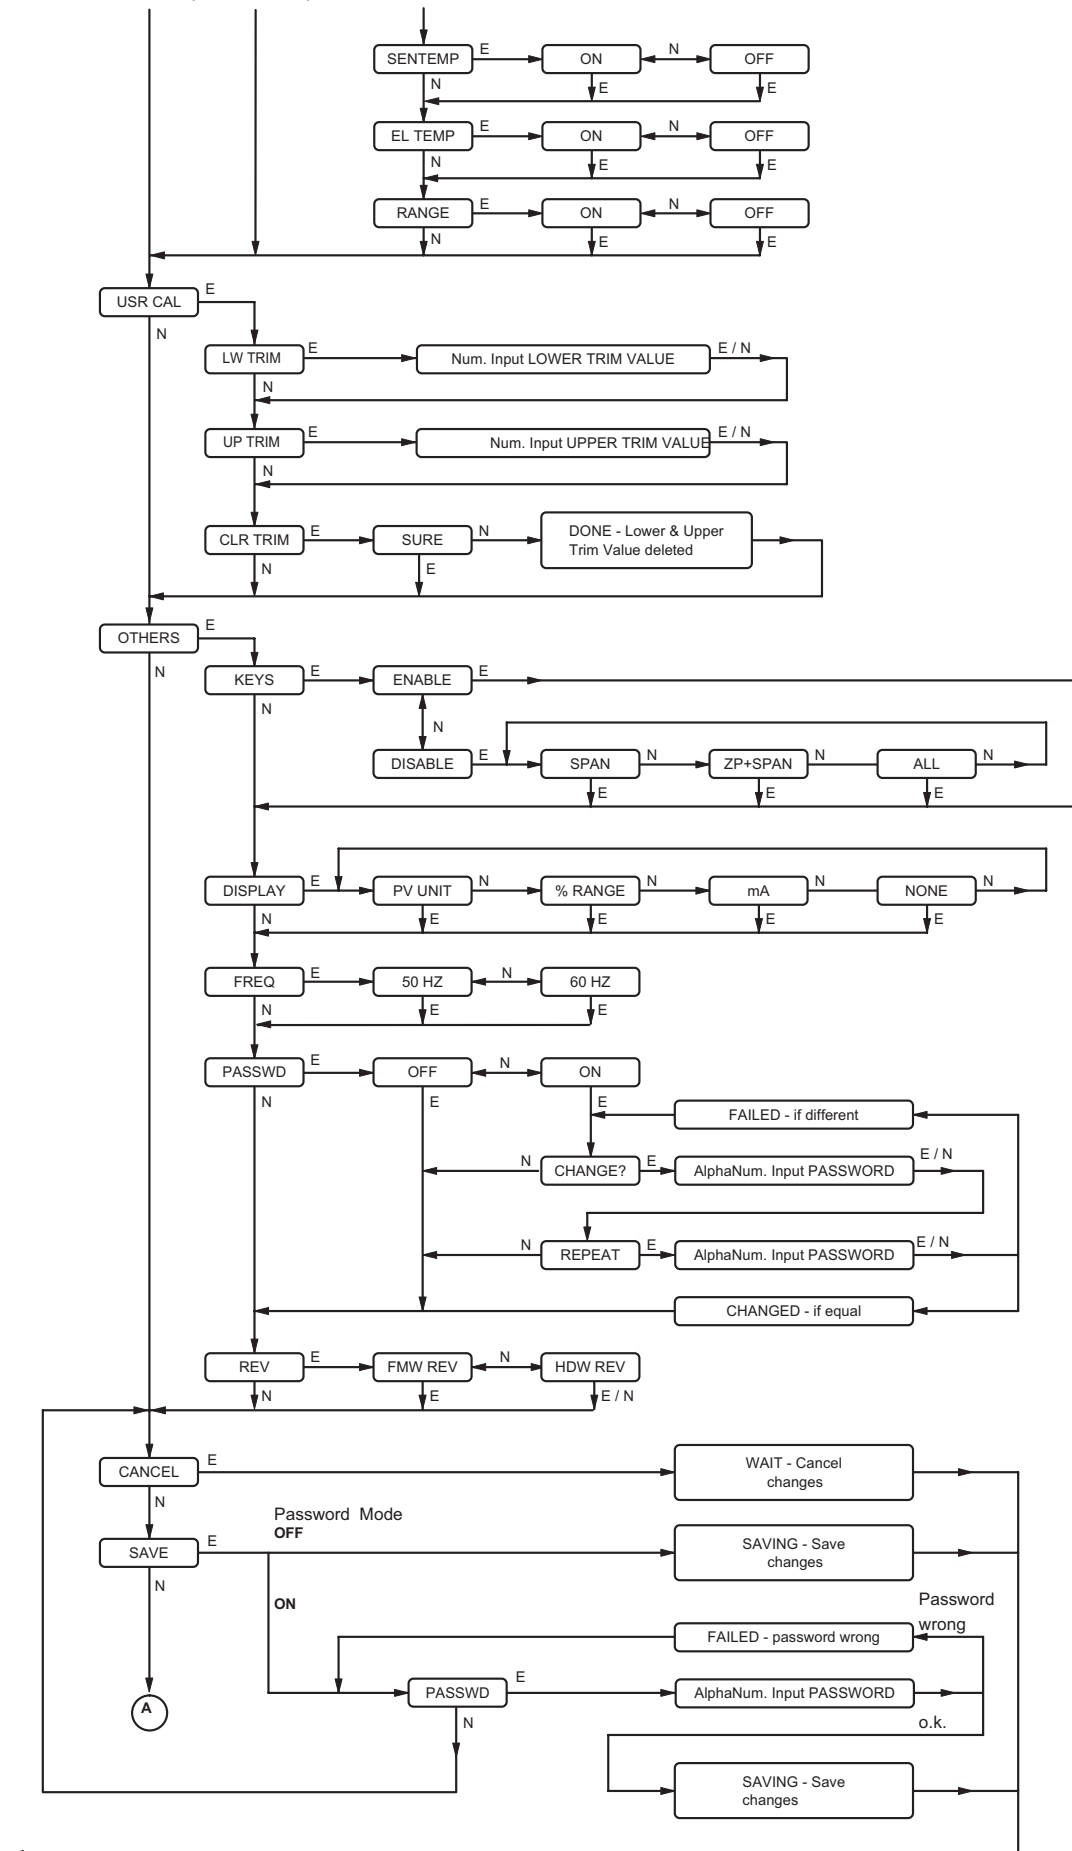

8.4.3.4 Menu node “USR CAL”

User calibration of measured value PV.

Menu node “LW TRIM”

Calibration of lower trimpoint. Indication of measuring value corresponding to the lower trimpoint and entry of value.

Following entry of trimpoint the transmitter calculates, based on trimpoint and measuring value, a new zeropoint for its transmitting characteristics.

Menu node “UP TRIM”

Calibration of upper trimpoint. Indication of measuring value corresponding to upper trimpoint and entry of value.

Following entry of trimpoint the transmitter calculates, based on trimpoint and measuring value, a new zeropoint and new end for its transfer characteristics .

Menu node “CLRTRIM”

Delete user calibration (clear trimpoints).

8.4.3.5 Menu node “OTHERS”**Menu node “KEYS / ENABLE”**

Release of all functions of external keys (0%- and 100%-key) of transmitter.

Menu node “KEYS / DISABLE”

Selective blocking of external keys of transmitter.

SPAN	URV configuration is blocked
ZP+SPAN	LRV + URV configuration is blocked
ALL	All functions are blocked

Menu node “DISPLAY”

Configuration of measurement diagram in display.

PV UNIT	Display of value and unit of PV
% RANGE	Display of AO in %
MA	Display of AO in mA
NONE	No display

Menu node “FREQ”

Adapt the trouble suppression to line frequency 50 / 60 Hz.

Menu node “PASSWD”

Branching into password administration. It is possible to secure storing of changes in the “SPECIAL” menu by a password interrogation, i.e. password interrogation may be activated (ON) or deactivated (OFF). It is possible to change the password during activated password interrogation. Dual input of password confirms the change.

Menu node “REV”

Display of firmware and hardware revisions.

8.4.3.6 Menu node “CANCEL”

Taking back all changes by pressing ENTER key.

8.4.3.7 Menu node “SAVE”

During deactivated password interrogation all changes are stored by pressing ENTER. During activated password interrogation it is necessary to enter the correct password (the old password has to be used in the configuration of a new password) to store all changes .

8.4.7 Error messages

The following error messages are possible:

BADDAMP	invalid range of damping
BAD LRV	invalid range of LRV
BAD URV	invalid range of URV
BADSPAN	span upper trim point – lower trim point < 2 % of max. admissible span of measurement
BAD PAR	invalid range of upper or lower trim point
BADPROC	invalid value of upper or lower trim point
BAD URL	invalid range of URL
BAD MA	invalid range of output current
WR PROT	transmitter is write protected

If one of this errors occurs, entry it will not be accepted. Break-off by activating CANCEL.

8.4.8 Warning messages

A configuration that triggers a warning will be accepted and can be assumed via SAVE.

Warnings are:

WRNSPAN	observe extended technical data for turn down > 1:20 (TI EMP0600G-(en))
WRN URV-	invalid range of URV due to indirect configuration.

8.4.9 Time-out monitoring

By entering menu node “MAINT” or “SPECIAL” the monitoring of all keys will be started for 120 seconds which will be restarted with each pressing of keys.

By exceeding the monitoring time all previous changes will be canceled and the menu is branching to menu node “Display PV”.

Only the menu steps associated to menu nodes “USR CAL” and “APPLY” are not monitored.

8.5 PROFIBUS

Abbreviations:

E ENTER button
 N NEXT button
 (with autorepeat: i.e. long, continuous actuation corresponds to multiple single actuations)

The following abbreviations are defined in communication protocol:

PROFIBUS:

LRL Lower Range Limit
 LRV Lower Range Value
 PV Primary Variable (measured value)
 URL Upper Range Limit
 URV Upper Range Value

A branch in the flow charts is called 'node' here.

Note: Setting with PC20 Software

Beside the in the following described settings with display keys, the PC 20-software still contains large functions (see also MI 020-495):

- Extended configuration
- Calibration of Sensor
(in the workshop, after exchanging the Sensor)
- Test of Transmitter
- Trend recording

Extended configuration with PC20 contains the access to the 32 X/Y values for the customized characteristic, the access to the alarm limits and the access to flange material and dimensions of the sensor.

In addition the mode can be switched between AUTO/MAN/O/S.

The measured value can be simulated; in Mode MAN the output can be written directly.


The calibration after exchange of the sensor contains both the transmission of the finger print data of the sensor and the sensor alignment with password.

With Test of Transmitter the recorded diagnostic data can be queried. The measured value can be simulated and the output be written directly.

With "Trend" the output of connected device is recorded and displayed.

8.5.0 Menu structure

The highest menu level offers sub-menus "Display PV", "Maintenance" and "Special".

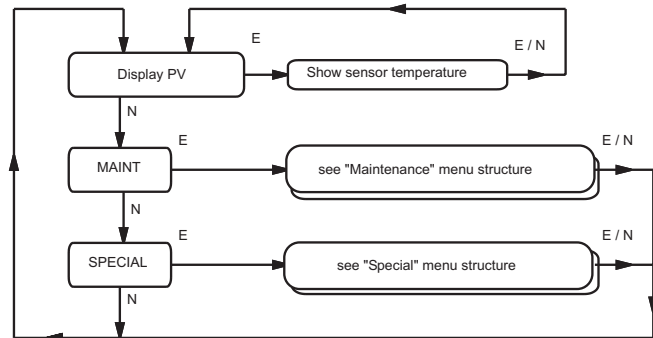


8.5.1 Menu node "Display measurement value"

After each pressing the key ENTER alternately is indicated:

- Sensor Temperature in °C or
- the value selected in Menu 8.5.3.5:
 - Measured value PV and physical unit
 - Output value and physical unit
 - No display.

8.5.2 Menu node "MAINT"

After Branching to "Maintenance" menu (no protection by password) the following functions are possible:

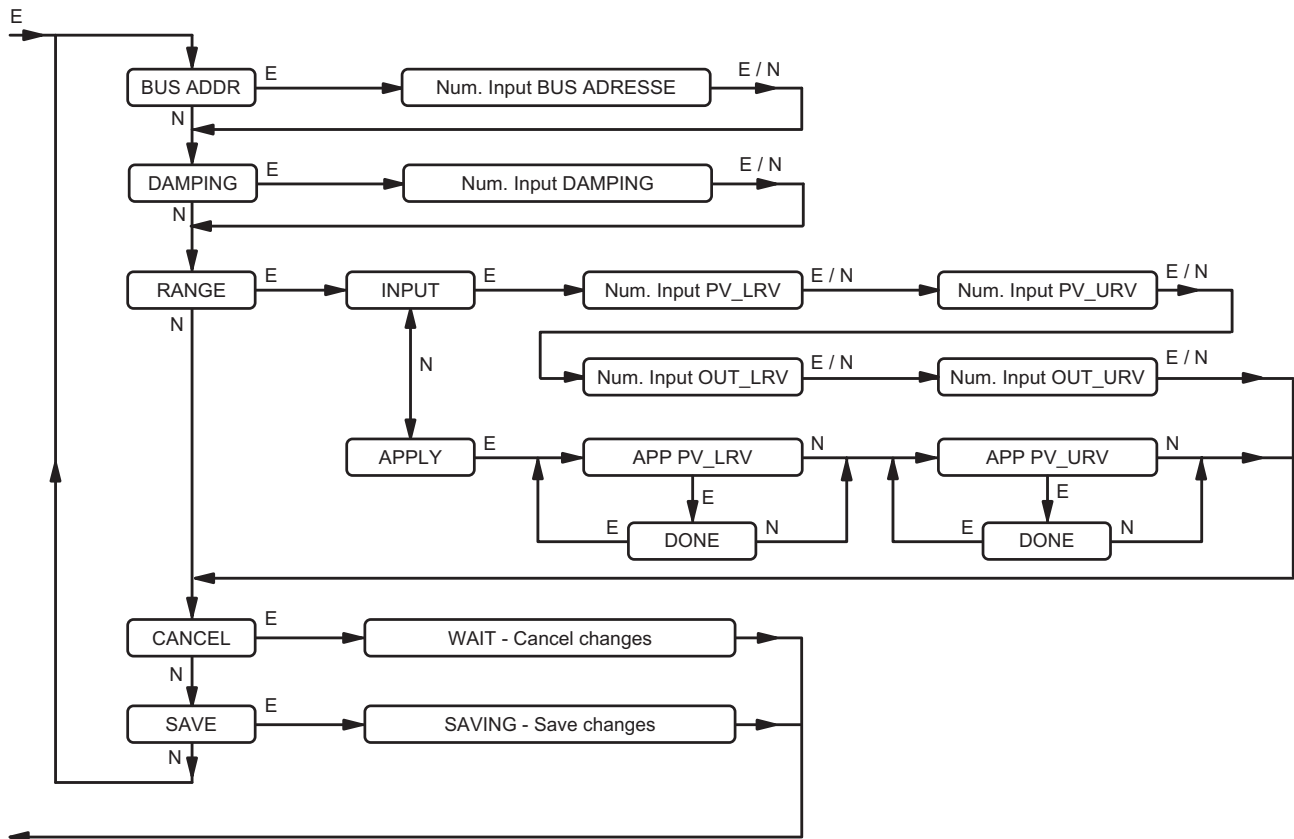

8.5.2.1 Menu node "BUS ADDRESS"

Numerical input of Bus Address. The rated value range is 1 ... 125.

8.5.2.2 Menu node "DAMPING"

Configuration of output signal damping.

"Numerical Input DAMPING"

Display / Input of OUT damping (phys. unit ,SEC'). The rated value range is 0 ... 32 seconds.

8.5.2.3 Menu node "RANGE"

In node "INPUT" the Lower/Upper Range Value PV_LRV / PV_URV and the Lower/Upper Output Value OUT_LRV / OUT_URV is configured.

In node "APPLY" the actual current measured value is indicated and confirmed by pressing the ENTER key. The rated value range is LRL...URL.

"INPUT / Numerical input PV_LRV"

Configuration of PV_LRV by numerical input. Normally 0; exception with Zero elevation.

"INPUT / Numerical input PV_URV"

Configuration of PV_URV by input.

"INPUT / Numerical input OUT_LRV" ¹⁾

Configuration of OUT_LRV by input.

"INPUT / Numerical input OUT_URV" ¹⁾

Configuration of OUT_URV by input.

"APPLY / APP PV_LRV"

(use only with Zero elevation)

Configuration of PV_LRV by default, the current PV is indicated. Confirm PV_LRV by pressing ENTER key.

"APPLY / APP PV_URV"

Configuration of PV_URV by default, the current PV is indicated. Confirm PV_URV by pressing ENTER key.

8.5.2.4 Menu node "CANCEL"

By pressing ENTER key all changes are cancelled.

8.5.2.5 Menu node "SAVE"


By pressing ENTER key all changes are stored.

1) After input the alarm limits are set to standard values:

hi = 100 %, hihi = 110 %, lo = 0 %, lol = -10 %, hysteresis 0.5 %
For unit of OUT see display.

8.5.3 Menu node "SPECIAL"

Branching to "Special" menu. In difference to the "Maintenance" menu it is possible to make extensive configuration. Optional it is possible to configure the password protection.

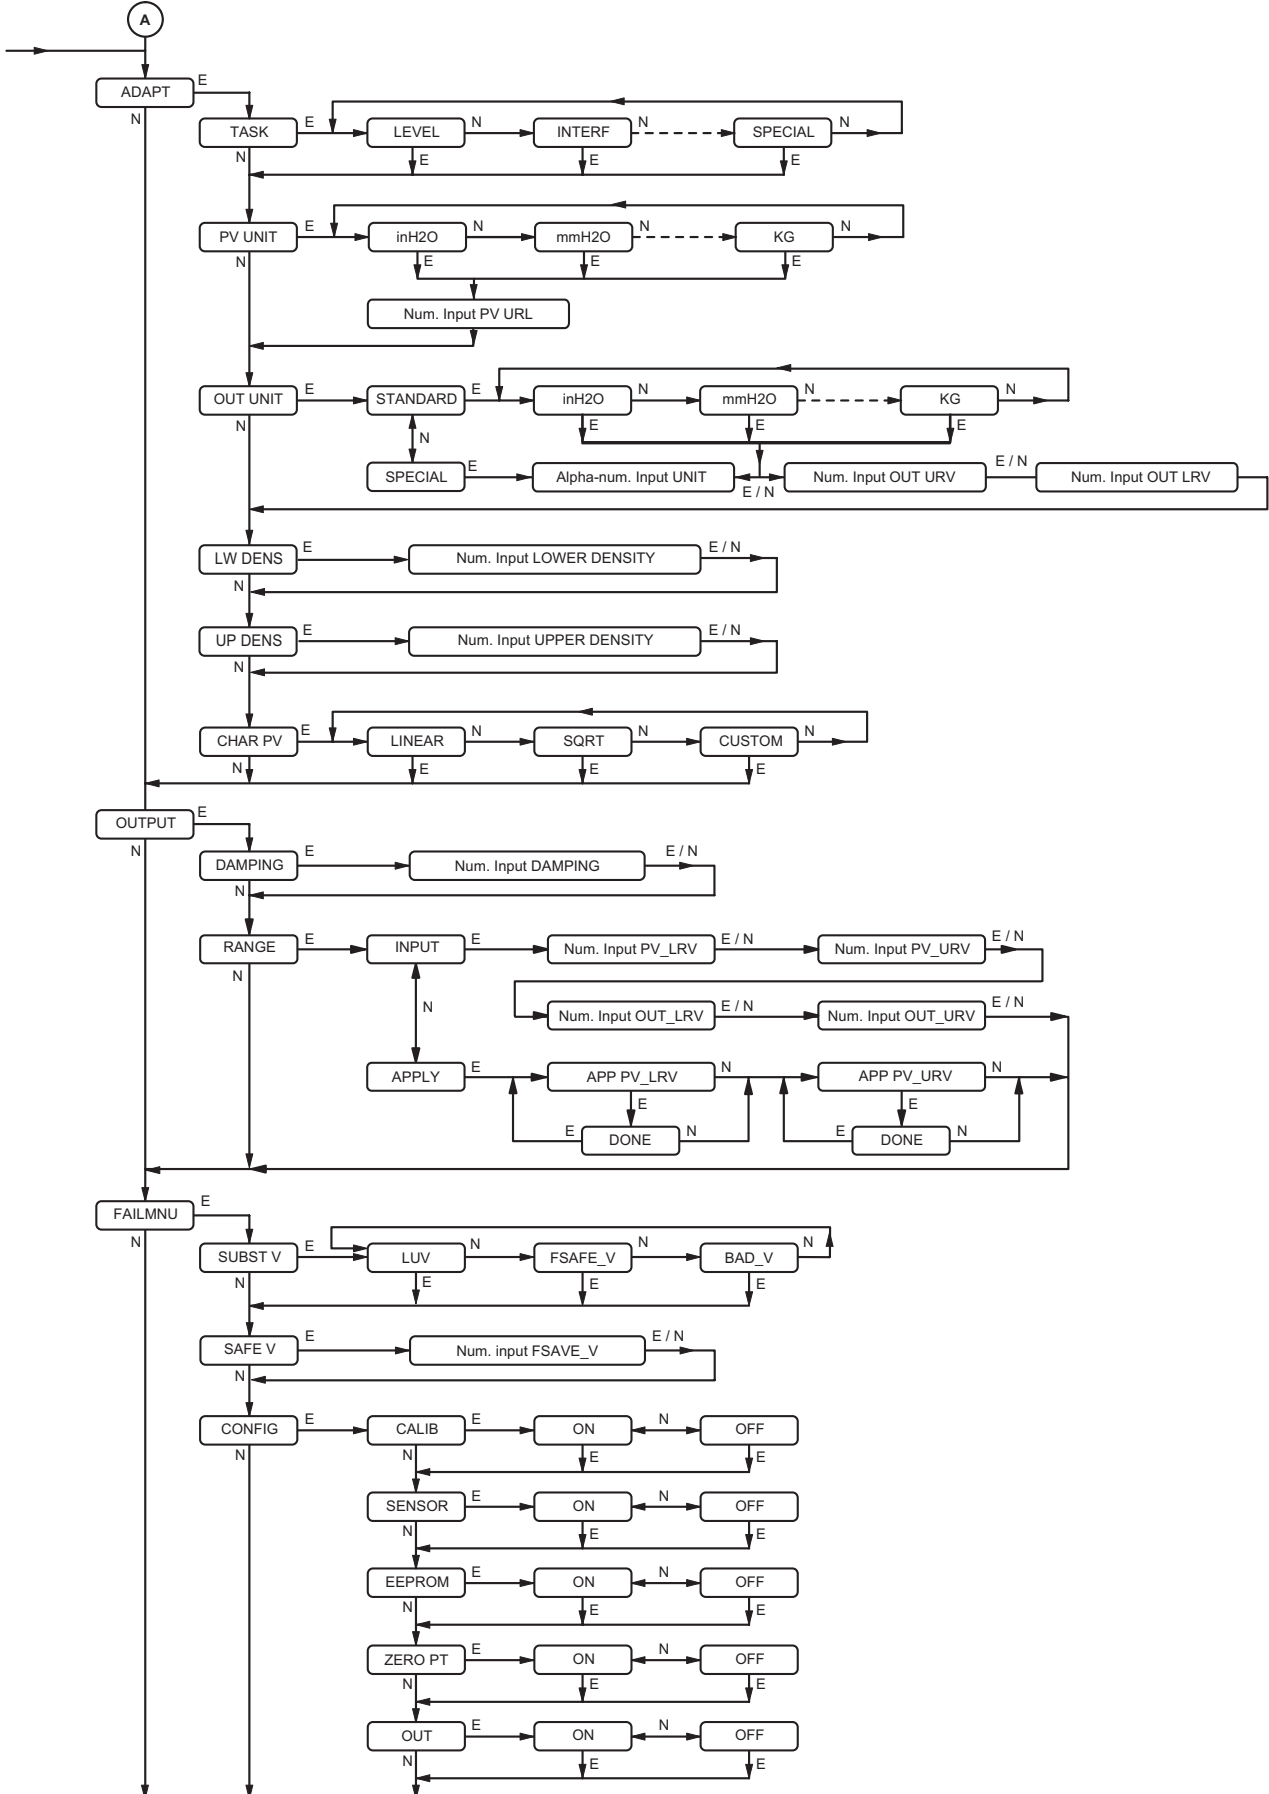

8.5.3.1 Menu node “ADAPT”

Configuration for adaptation of sensor measurement value.

Menu node “PRV UNIT”

Configuration of standard unit for PV. Selection of the unit in menu. In case old and new units are not identical, PV_URL is set to 0 and has to be entered.

Menu node “OUT UNIT / STANDARD”

Configuration of a standard unit for output value OUT. Selection of the unit in menu. If old and new unit are not identical OUT_LRV and OUT_URL are set to 0 and must be entered.

Alarm limit values see "MAINT".

Menu node “OUT UNIT / SPECIAL”

Configuration of a special unit for output value OUT. Definition of an unit with up to 5 characters. OUT_LRV and OUT_URL are set to 0 and must be entered.

Menu node “LW DENS” and ”UP DENS”

Configuration of density (lower density and/or upper density) of the measuring product. The configured density is in the unit 'kg/m³' and is of a purely informative nature having no effect on the functionality of the transmitter.

Menu node “CHAR PV”

Configuration of transmitting characteristic of measured value PV. Selection of characteristic in the menu.

LINEAR – linear characteristic

SQRT – square-root extracted characteristic

CUSTOM – customized characteristic

Value pairs X/Y associated with characteristic 'CUSTOM' cannot be entered via display menu but via PC20 Software.

8.5.3.2 Menu node “OUTPUT”

Configuration of output of transmitter.

Menu node “DAMPING” and “RANGE”

see “MAINT”

Menu node “XFR FCT” (not with level devices)
(ON/OFF of Low Cut for flow transmitters)

8.5.3.3 Menu node “FAILMNU”

Configuration of the reactions to errors.

Menu node “SUBST V / LUV”

Configuration of the behavior during 'Hold last Value'. In case of an error, the transmitter maintains the last valid output value until the error is eliminated (automatic return)..

Menu node “SUBST V / FSAFE_V”

Configuration of the behavior of the 'substitute value'. In case of an error, the transmitter changes the output value to a configured substitute value and maintains the output value until the error is eliminated (automatic return).

Menu node “SUBST V / BAD_V”

Configuration 'wrong value'. During an error the output of transmitter shows the wrong value. Failsafe is shown.

Menu node “SAFE_V”


Configuration of the substitute value. This value is of significance only if the “Substitute value” FSAFE_V is configured. During an error this configured value becomes the output current of the transmitter. The permissible value range is -10 ... +110 %.

Menu node “CONFIG”

Branching for configuration of fault signal messages. For the following nodes a fault signal message can become activated (ON) or suppressed (OFF):

CALIB	Internal calibration failed
SENSOR	Sensor value out of nominal range (+ / -150 %)
EEPROM	Write to EEPROM impossible
ZERO PT	Zero point out of sensor limits (+ / -150 %)
OUT	Measured value out of OUT ranging limits (+ / -110 %)
SENTEMP	Sensor temperature out of limits - 60 °... 220 °C
EL TEMP	Electronic temperature out of limits - 45 °... 85 °C
RANGE	Configured measuring range invalid

Menu node "SPECIAL" (continued)

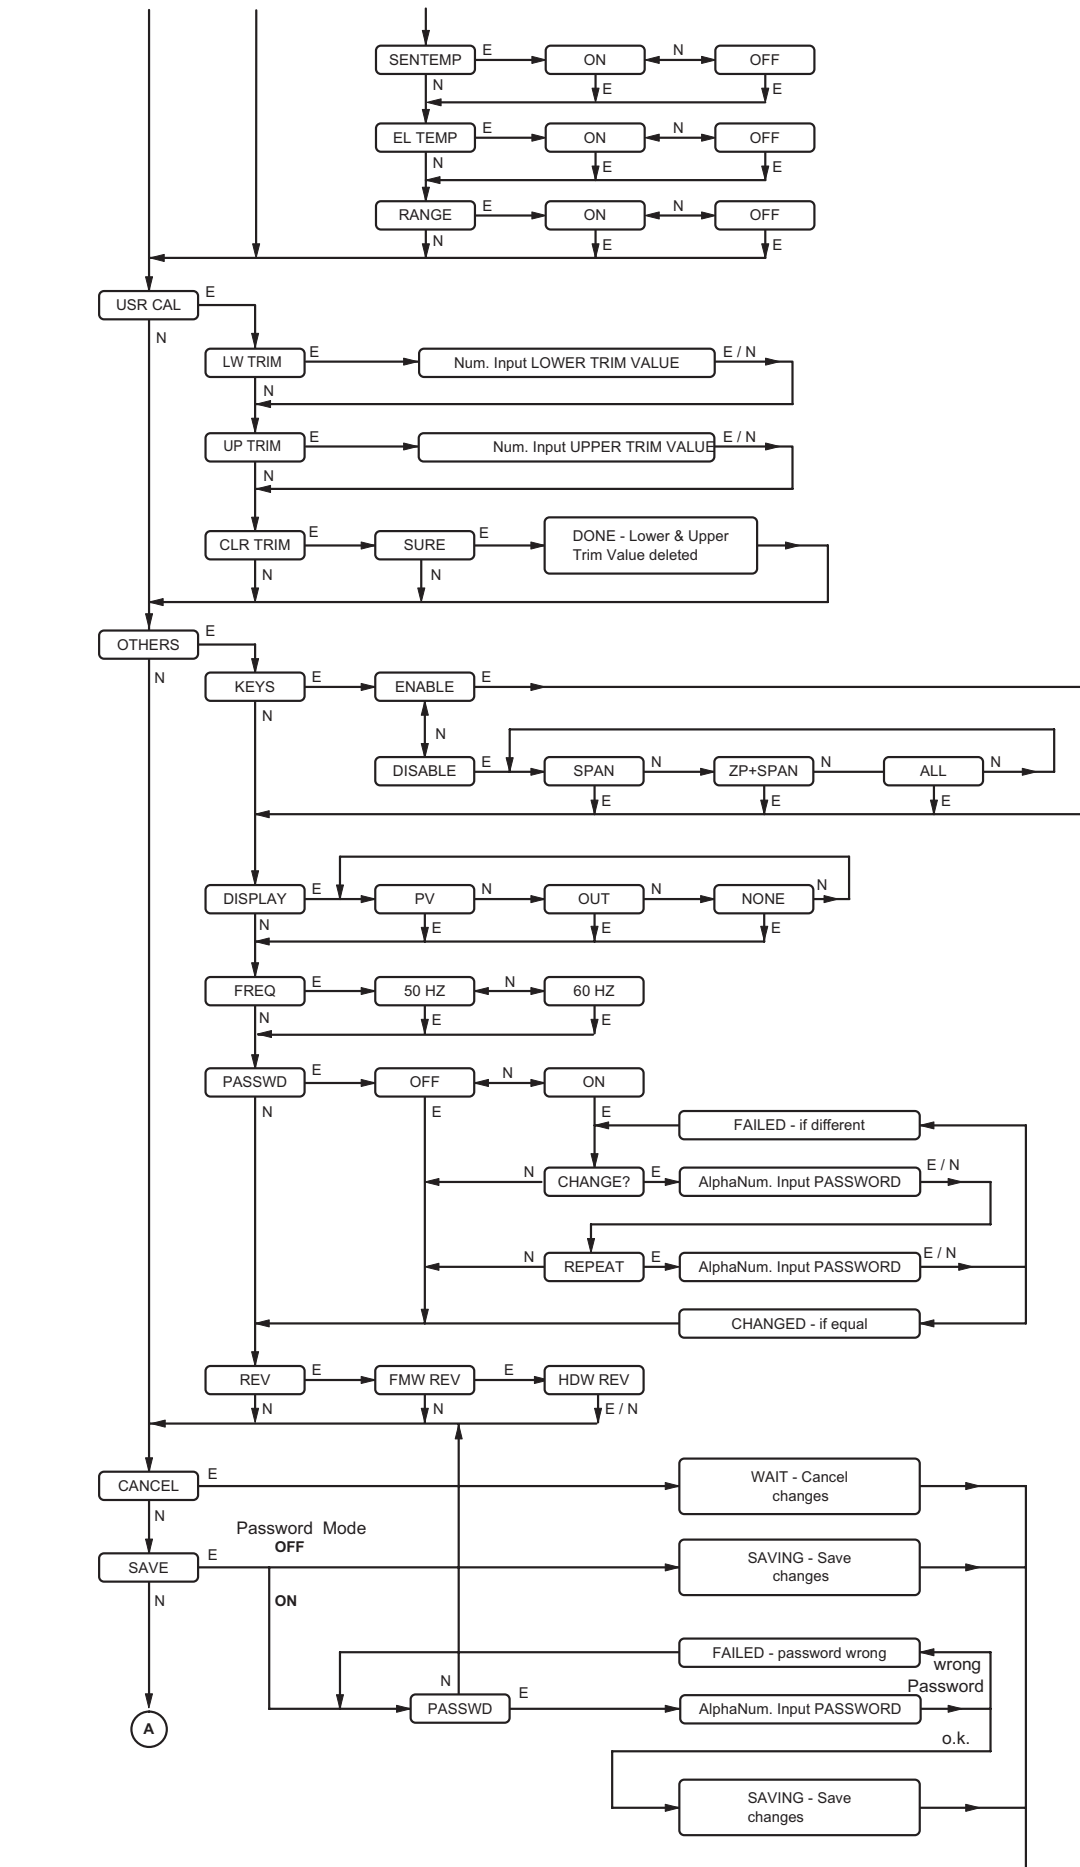

8.5.3.4 Menu node “USR CAL”

Custom calibration of measured value PV (see also flow diagram).

Menu node “LW TRIM”

Calibration of lower trimpoint (Cal_Point_lo).
Indication of measuring value corresponding to the lower trimpoint, and entry of value. Following entry of trimpoint the transmitter calculates, based on trimpoint and measuring value, a new zero point for its transmitting characteristics.

Menu node “UP TRIM”

Calibration of upper trimpoint (Cal_Point_hi).
Indication of measuring value corresponding to upper trimpoint and entry of value. Following entry of trimpoint the transmitter calculates, based on trimpoint and measuring value, a new zero point for its transmitting characteristics.

Menu node “CLRTRIM”

Delete custom calibration (clear trimpoints).

8.5.3.5 Menu node “OTHERS”**Menu node “KEYS / ENABLE”**

Release of all functions of external keys (0%- and 100%- button) of transmitter.

Menu node “KEYS / DISABLE”

Selective blocking of external keys (in transmitter housing):

SPAN	Configuration Upper Range Value blocked
ZP+SPAN	Configuration Upper Range Value and configuration Lower Range Value blocked
ALL	All functions are blocked

Menu node “DISPLAY”

Configuration of presentation of the value in the display:
PV Display of value and unit of measured value PV
OUT Display of value and unit of Output
NONE No display

Menu node “FREQ”

Select the line frequency noise suppression filter 50 / 60 Hz

Menu node “PASSWD”

Password administration.

It is possible to secure storing of changes in the “SPECIAL” menu by a password interrogation, i.e. password interrogation may be activated (ON) or deactivated (OFF).

It is possible to change the password during activated password interrogation. Dual input affects the change.

The device is shipped without password (OFF).

Menu node “REV”

Display of firmware and hardware revisions.

8.5.3.6 Menu node “CANCEL”

Taking back all changes by pressing ENTER.

8.5.3.7 Menu node “SAVE”

During deactivated password interrogation all changes are stored by pressing ENTER. During activated password interrogation it is necessary to enter the correct password (the old password has to be used in the configuration of a new password) to store all changes.

8.5.4 Error messages

The following error messages can appear at display:

BADDAMP	invalid range of damping ¹⁾
BAD LRV	invalid range of Lower range value PV_LRV ²⁾
BAD URV	invalid range of Upper range value PV_URV ²⁾
BADSPAN	span upper trim point – lower trim point < 2 % of max. admissible span of measurement
BAD PAR	invalid range of upper or lower trim point ³⁾
BADPROC	invalid value of upper or lower trim point ³⁾
BAD FSV	invalid substitution value
BAD URL	invalid range of URL
WR PROT	Transmitter is write protected

If one of this errors occurs, entry will not be accepted.
Break-off by activating CANCEL.

8.5.5 Warning messages

A configuration, which causes a warning, is accepted and can be assumed by means of "SAVE".

Warnings are:

WRNSPAN	observe extended technical data for turn down > 1:20 (see TI EML0610P)
WRN URV	invalid range when changing Lower Range Value
LO DISA	Local operation disabled (Local keys blocked)
DB LOCK	Data base blocked; Hardware write protected

8.5.6 Time-out monitoring

By entering menu node “MAINT” or “SPECIAL” the monitoring of all keys will be started for 120 seconds which will be restarted with each pressing of keys.

By exceeding the monitoring time all previous changes will be canceled and the menu is branching to menu node “Display PV”.

Only the menu steps associated to menu nodes “USR CAL” and “APPLY” are not monitored.

1) Is <0 or >32

2) Is out of PV_URL and PV_LRL

3) Is < -110 % or > +110 % of Sensor_Value,
see flow diagram

8.6 FOUNDATION Fieldbus

Abbreviations:

E ENTER button
 N NEXT button
 (with autorepeat: i.e. long, continuous actuation corresponds to multiple single actuations)

The following abbreviations are defined in communication protocol:


FOUNDATION Fieldbus:

LRL Lower Range Limit PRV
 LRV Lower Range Value XD_Scale
 LRV Lower Range Value OUT_Scale
 PV Process Value
 PRV Primary Value
 URL Upper Range Limit PRV
 URV Upper Range Value XD_Scale
 URV Upper Range Value OUT_Scale

A branch in the flow charts is called 'node' here.

8.6.0 Menu structure

The highest menu level offers sub-menus "Display measurement value", "Maintenance" and "Special".

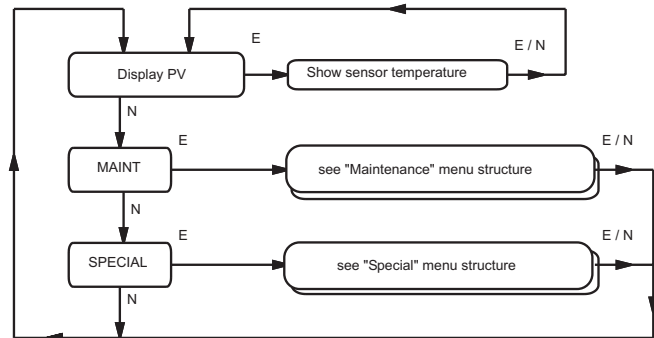


8.6.1 Menu node "Display measurement value"

After each pressing the key ENTER alternately is indicated:

- Sensor Temperature in °C or
- the value selected in Menu 8.6.3.3:
 - Measured value PRV and physical unit
 - Output value and physical unit
 - No display.

8.6.2 Menu node "MAINT"

After Branching to "Maintenance" menu (no protection by password) the following functions are possible:

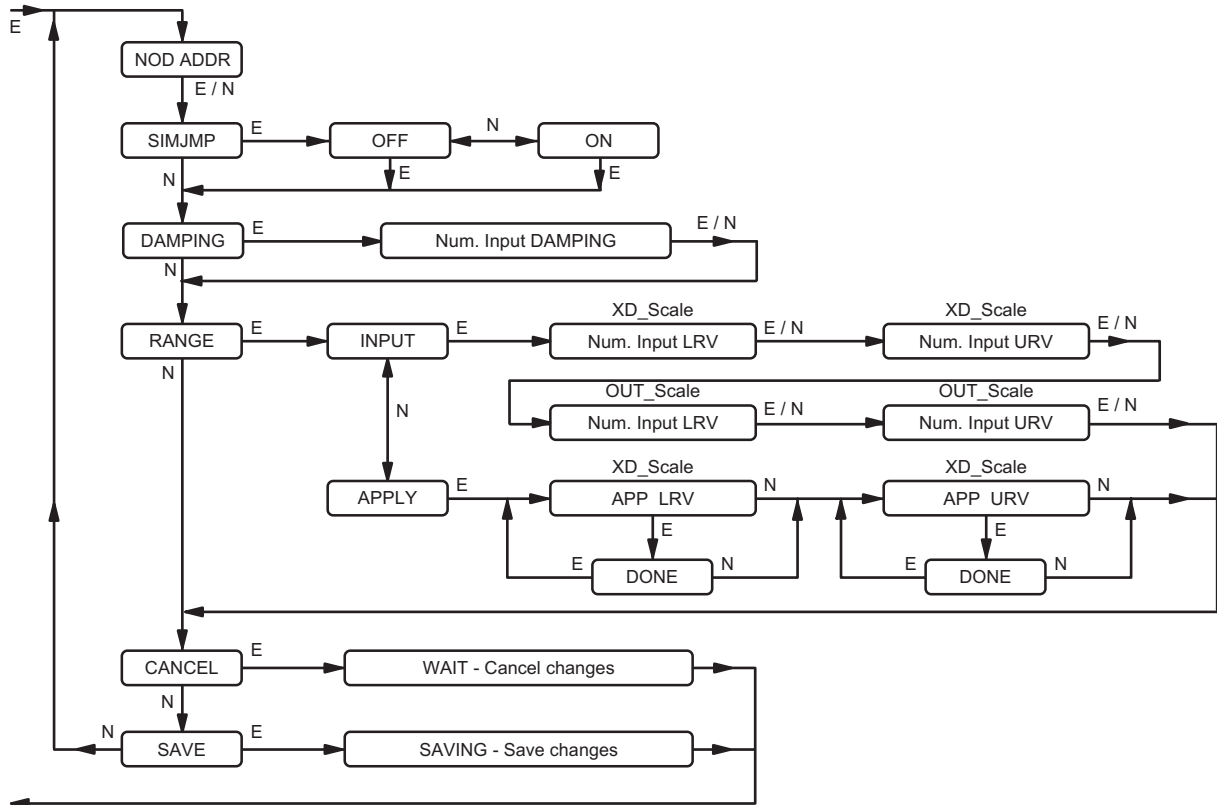

8.6.2.1 Menu node "NODE ADDRESS"

Shows address of device. Not changeable.

8.6.2.2 Menu node "SIM JMP"

Simulates a "jumper". Simulation of PRIMARY_VALUE via external configurator when ON.

8.6.2.3 Menu node "DAMPING"

Configuration of output signal damping.

"Numerical Input DAMPING"

Display / Input of OUT damping (phys. unit ,SEC'). The rated value range is 0 ... 32 seconds.

8.6.2.4 Menu node "RANGE"

Configuration of LRV and URV of XD_Scale and OUT_Scale.

In node "INPUT" the values can be entered.

In node "APPLY" the actual measured is shown and confirmed by means of the ENTER key.

The value has to be in the range between LRL and URL.

"INPUT / Numerical input LRV" of XD_Scale

Configuration of LRV by numerical input. Normally 0; exception with Zero elevation.

"INPUT / Numerical input URV" of XD_Scale

Configuration of URV by numerical input.

"INPUT / Numerical input LRV" of OUT_Scale

Configuration of LRV by input. Alarm limits are set automatically to LRV and $LRV - (URV - LRV) * 0.1$

"INPUT / Numerical input URV" of OUT_Scale

Configuration of URV by input. Alarm limits are set automatically to URV and $URV + (URV - LRV) * 0.1$

"APPLY / APP LRV" of XD_Scale

(use only with Zero elevation)

Configuration of LRV by default, the current PRIMARY_VALUE is indicated. LRV is confirmed by pressing ENTER key.

"APPLY / APP URV" of XD_Scale

Configuration of URV by default, current PRIMARY_VALUE is indicated). URV is confirmed by pressing ENTER key. OUT_SCALE remains unchanged.

8.6.2.5 Menu node "CANCEL"


By pressing ENTER key all changes are cancelled.

8.6.2.6 Menu node "SAVE"

By pressing ENTER key all changes are stored..

8.6.3 Menu node "SPECIAL"

Branching to "Special" menu. In difference to the "Maintenance" menu it is possible to make extensive configuration. Optional it is possible to configure the password protection.

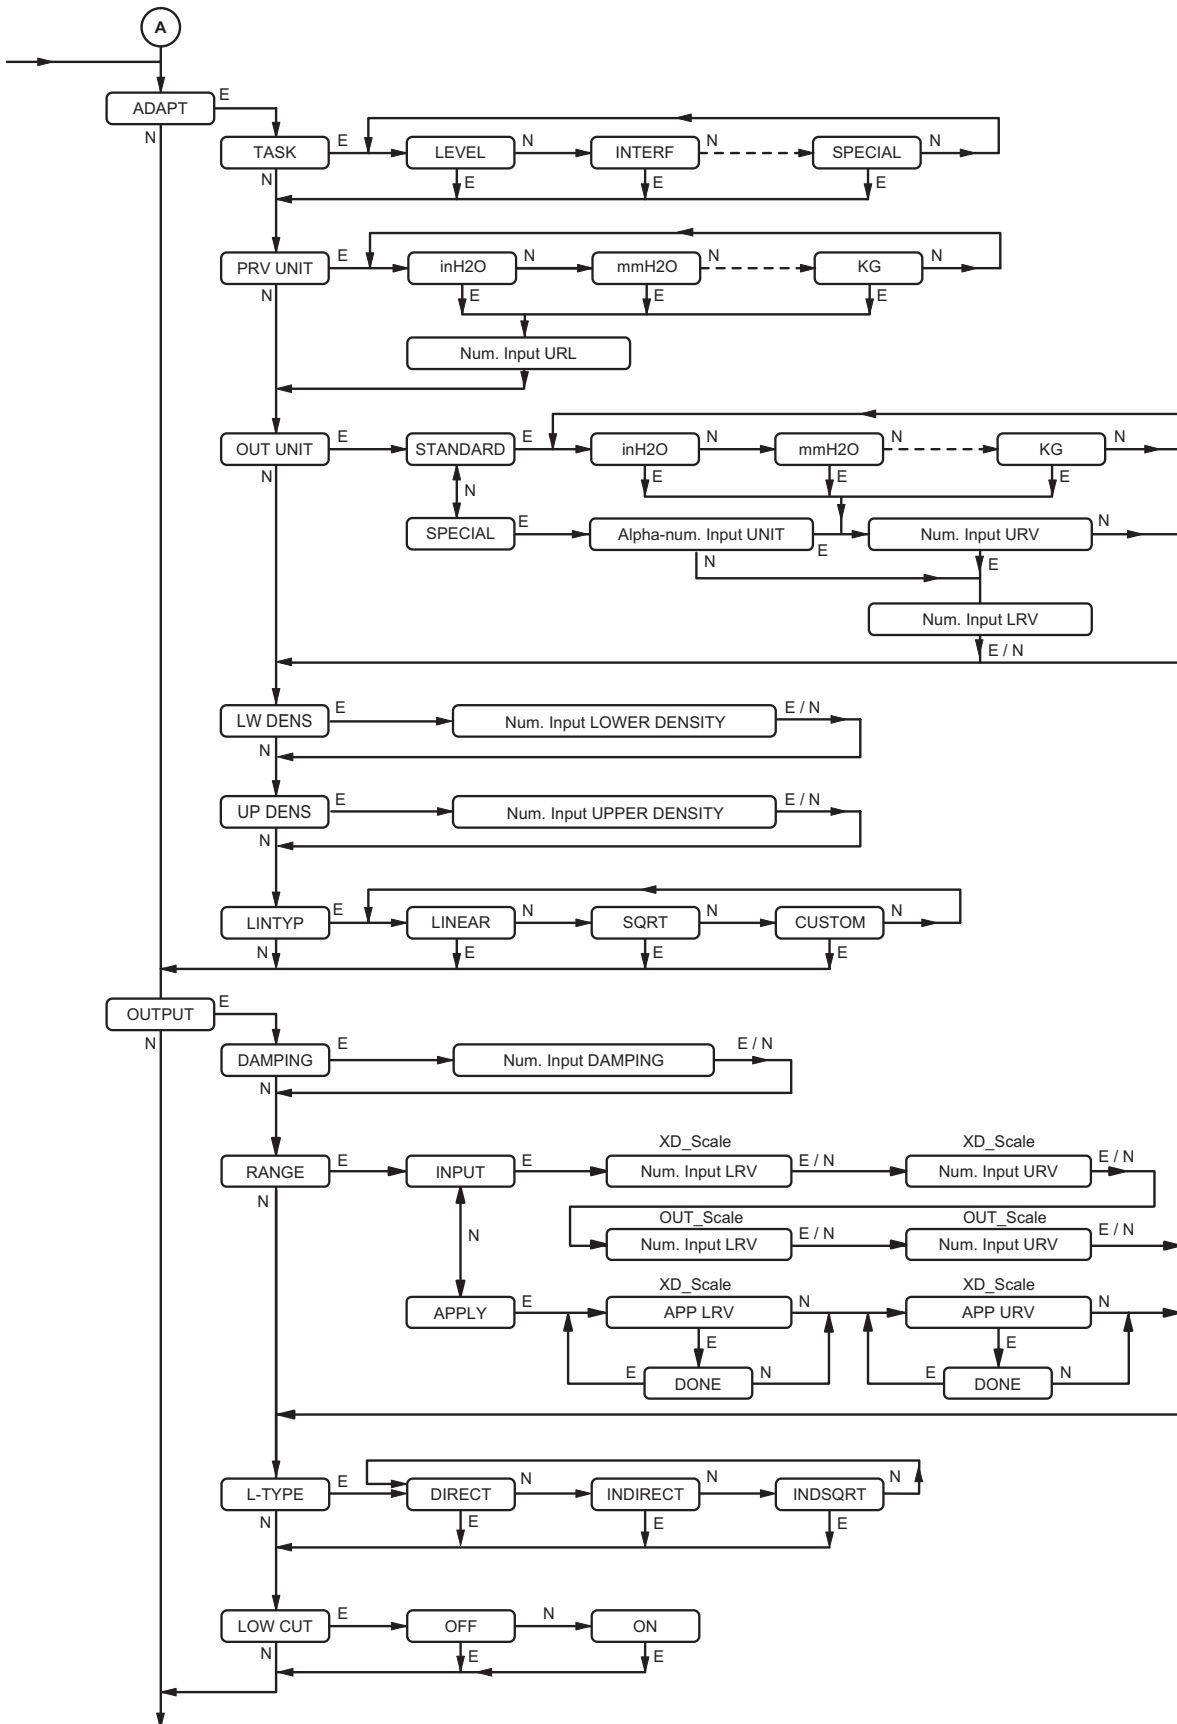

8.6.3.1 Menu node “ADAPT”

Configuration for adaptation of sensor measurement value.

Menu node “TASK”

Configuration of measurement task. Selection of measuring task in menu. The configured measuring task is of a purely informative character and has no effect on the functionality of the transmitter (Primary value type).

Menu node “PRV UNIT”

Configuration of a standard unit for measured value PRV. Selection of the unit in menu. In case old and new units are not identical, URL is set to 0 and has to be entered.

Menu node “OUT UNIT / STANDARD”

Configuration of a standard unit for output value OUT. Selection of the unit in menu. If old and new unit are not identically LRV and URL are set to 0 and must be entered.

Menu node “OUT UNIT / SPECIAL”

Configuration of a special unit for output value OUT. Definition of an unit with up to 5 characters. LRV and URL are set to 0 and must be entered.

Menu node “LW DENS” und ”UP DENS”

Configuration of density (lower density and/or upper density) of the measuring product. The configured density is in the unit 'kg/m³' and is of a purely informative nature having no effect on the functionality of the transmitter.

Menu node “LIN TYP”

Configuration of transmitting characteristic of measured value PRV. Selection of characteristic in the menu:
 LINEAR – linear characteristic
 SQRT – square-root extracted characteristic
 CUSTOM – customized characteristic
 Value pairs X/Y associated with characteristic 'CUSTOM' cannot be entered via display menu.

8.6.3.2 Menu node “OUTPUT”

Configuration of transmitter output.

Menu node “DAMPING” and “RANGE”

see “MAINT” 8.6.2.3 and 8.6.2.4


Menu node “L-TYPE”

Configuration of transmitting characteristic of Process value PV. Selection of characteristic in the menu:
 DIRECT OUT/PV is measured value PRV (XD-Scale)
 INDIRECT OUT/PV is output value (OUT_Scale)
 IND SQRT OUT/PV is root-extracted output value (OUT_Scale) see Block diagram

Menu node “LOW CUT”

ON/OFF for small quantity suppression at output with square root of PV. Works to the value after characteristics. With level LOW CUT is set to 0.

Menu node "SPECIAL" (continued)

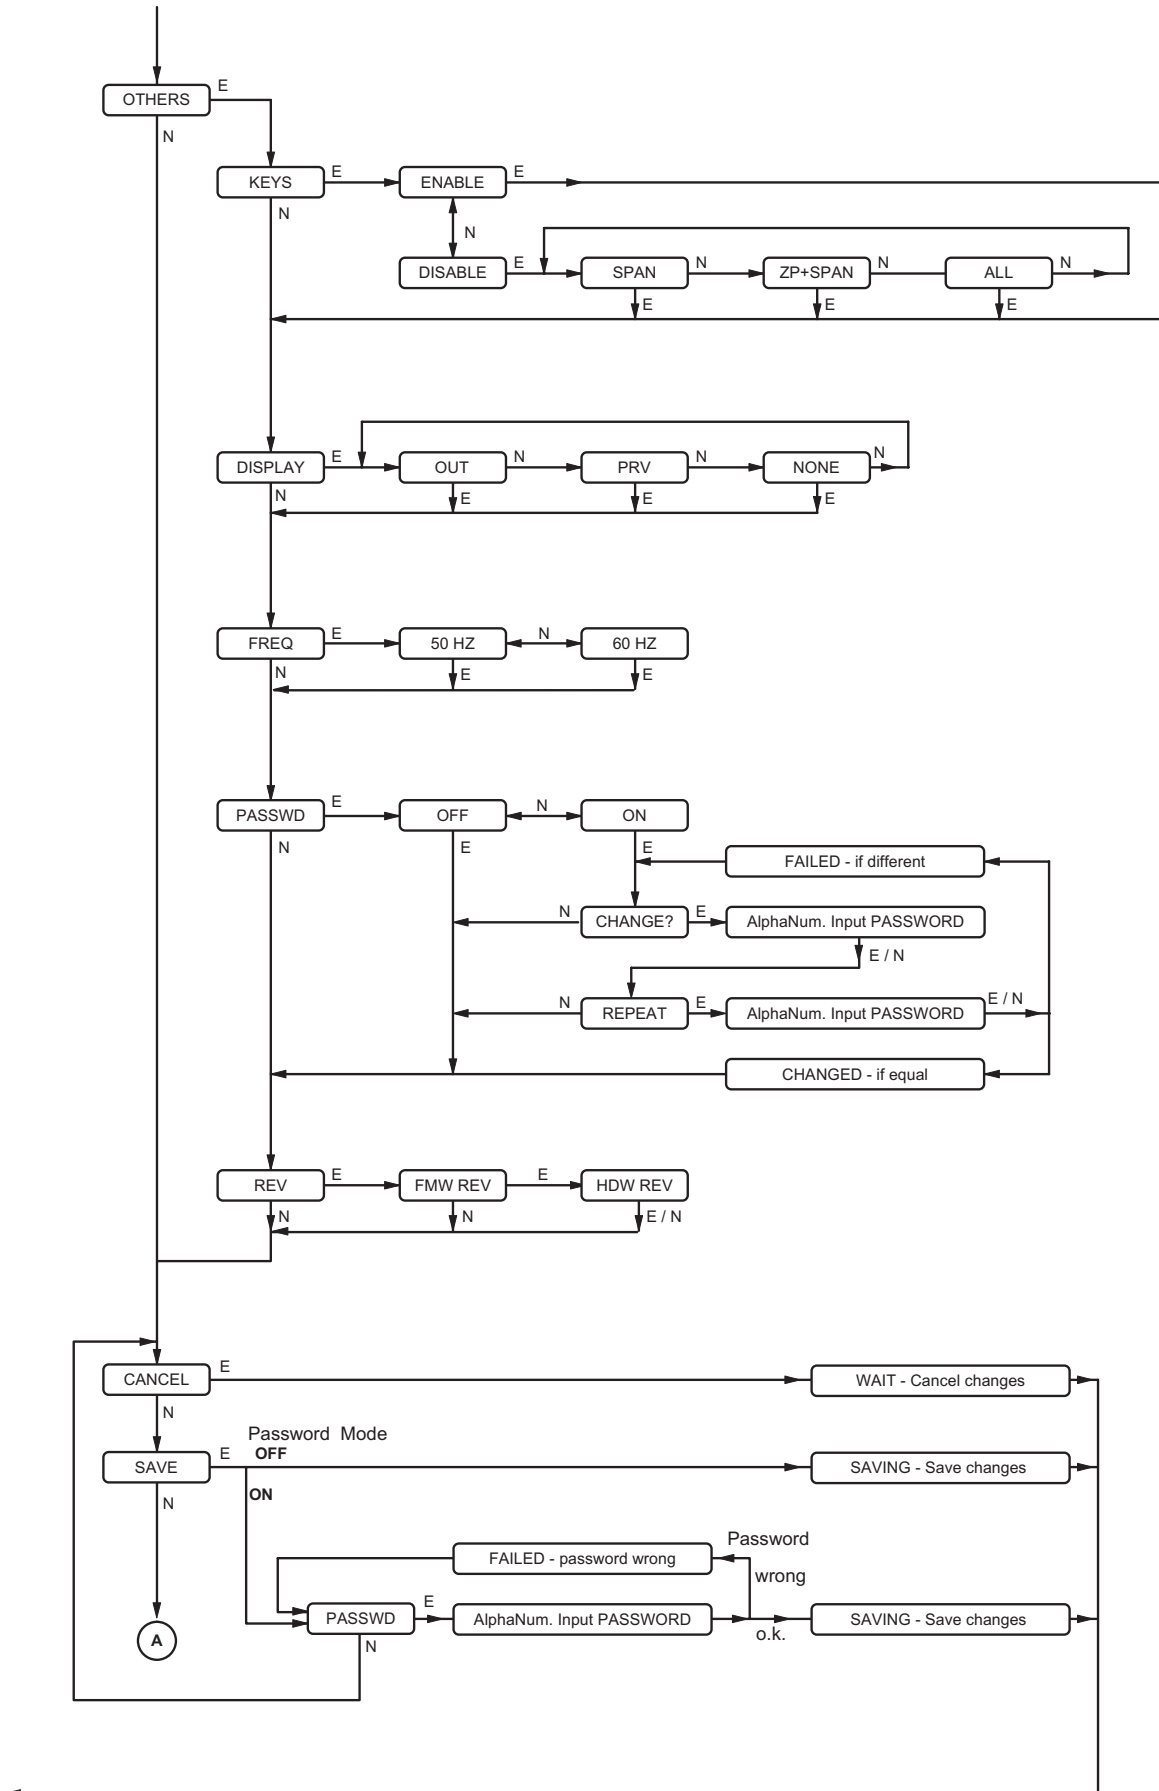

8.6.3.3 Menu node "OTHERS"**Menu node "KEYS / ENABLE"**

Release of all functions of external keys (0%- and 100%-key) of transmitter.

Menu node "KEYS / DISABLE"

Selective blocking of external keys (in transmitter housing):
 SPAN Configuration URV blocked (XD_Scale)
 ZP+SPAN Configuration LRV + URV blocked (XD_Scale)
 ALL All functions are blocked

Menu node "DISPLAY"

Configuration of presentation of the value in the display:
 PRV Display of value and unit of measured value PRV
 OUT Display of value and unit of Output
 NONE No display

Menu node "FREQ"

Select the line frequency noise suppression filter 50 / 60 Hz.

Menu node "PASSWD"

Password administration.

It is possible to secure storing of changes in the "SPECIAL" menu by a password interrogation, i.e. password interrogation may be activated (ON) or deactivated (OFF).

It is possible to change the password during activated password interrogation. Dual input affects the change.

Menu node "REV"

Display of firmware and hardware revisions.

8.6.3.4 Menu node "CANCEL"

Taking back all changes by pressing ENTER.

8.6.3.5 Menu node "SAVE"

During deactivated password interrogation all changes are stored by pressing ENTER. During activated password interrogation it is necessary to enter the correct password (the old password* has to be used in the configuration of a new password) to store all changes.

8.6.4 Error messages

The following error messages can appear at display:

BADDAMP	invalid range of damping ¹⁾
BAD LRV	invalid range of Lower range value LRV ²⁾
BAD URV	invalid range of Upper range value URV ²⁾
BADSPAN	Span OUT OUT= (URV – LRV) = 0
BAD ZERO	Zero point out of calibrated Sensor_Value of $\pm 110\%$
BADPROC	invalid value of upper or lower trim point ³⁾
OP DISA	local operation is disabled (local keys are blocked)
BAD URL	invalid range of PRV_URL
WR LOCK	Transmitter is write protected

If one of this errors occurs, entry will not be accepted. Break-off by activating CANCEL.

8.6.5 Warning messages

A configuration, which causes a warning, is accepted and can be assumed by means of "SAVE".

Warnings are:

WRNSPAN	observe extended technical data for turn down > 1:20 (see TI EML0610Q)
WRN URV	invalid range of URV due to indirect configuration (XD_URV > URL).

8.6.6 Time-out monitoring

By entering menu node "MAINT" or "SPECIAL" the monitoring of all keys will be started for 120 seconds which will be restarted with each pressing of keys.

By exceeding the monitoring time all previous changes will be canceled and the menu is branching to menu node "Display measured value".

Only the menu steps associated to menu node "APPLY" are not monitored.

*) Ex factory the password is "WKSHOP"

1) $Is < 0$ or > 32

2) Is out of PRV

3) $Is < -110\%$ or $> +110\%$ of Sensor Value

9 DIMENSIONING OF DISPLACER

CALCULATING WEIGHT FORCES (also see VDI/VDE-Guideline 3519, sheet 1)

Displacer length = measuring range

Measurement type	Weight forces		0 %	100 %
	Lower range value = 0 % output signal	Upper range value = 100 % output signal		
Liquid level (ρ_2 = negligible) 1)	$F_0 = F_G$	$F_{100} = F_G - V \cdot g \cdot \rho_1$		
Interface (ρ_2 = not negligible)	$F_0 = F_G - V \cdot g \cdot \rho_2$			
Density (ρ_2 = min. density, ρ_1 = max. density)				

**Displacer length > measuring range
(without elevation)**

Measurement type	Weight forces		0 %	100 %
	Lower range value = 0 % output signal	Upper range value = 100 % output signal		
Liquid level (ρ_2 = negligible) 1)	$F_0 = F_G$	$F_{100} = F_G - V \cdot g \cdot \rho_1 \frac{h_b}{L}$		
Interface (ρ_2 = not negligible)	$F_0 = F_G - V \cdot g \cdot \rho_2$	$F_{100} = F_G - V \cdot g \cdot (\rho_1 \frac{h_b}{L} + \rho_2 \frac{L - h_b}{L})$		

**Displacer length > measuring range
(with elevation)**

Measurement type	Weight forces		0 %	100 %
	Lower range value = 0 % output signal	Upper range value = 100 % output signal		
Liquid level (ρ_2 = negligible) 1)	$F_0 = F_G - V \cdot g \cdot \rho_1 \frac{h_0}{L}$	$F_{100} = F_G - V \cdot g \cdot \rho_1 \frac{h_0 + h_b}{L}$		
Interface (ρ_2 = not negligible)	$F_0 = F_G - V \cdot g \cdot (\rho_1 \frac{h_0}{L} + \rho_2 \frac{L - h_0}{L})$	$F_{100} = F_G - V \cdot g \cdot (\rho_1 \frac{h_0 + h_b}{L} + \rho_2 \frac{L - h_b - h_0}{L})$		

- F_G [N] Weight force of displacer in atmosphere
- F_0 [N] Weight force action on suspension point of displacer at lower range value
- F_{100} [N] Weight force action on suspension point of displacer at upper range value
- F_A [N] Buoyancy force of displacer ($F_A = F_0 - F_{100}$)
- V [m³] Displacer volume (specified on data label in cm³!)

- ρ_1 [kg/m³] Liquid density
- ρ_2 [kg/m³] Density of gas or lighter liquid
- g [m/s²] Local acceleration due to gravity (e.g. 9.807 m/s²)
- L [m] Displacer length
- h_0 [m] Lower range value
- h_b [m] Measuring span


Attention: 1 kg generates a force of 9.807 N

1) ρ_2 is negligible if ρ_2 = gas at atmospheric pressure or with ratio $\rho_2 : \rho_1$ less than 0.5 %.

10 DIMENSIONS

Without adapter

DN 80 and 100 up to PN 400, 3 inch up to Class 900 and 4 inch up to Class 2500

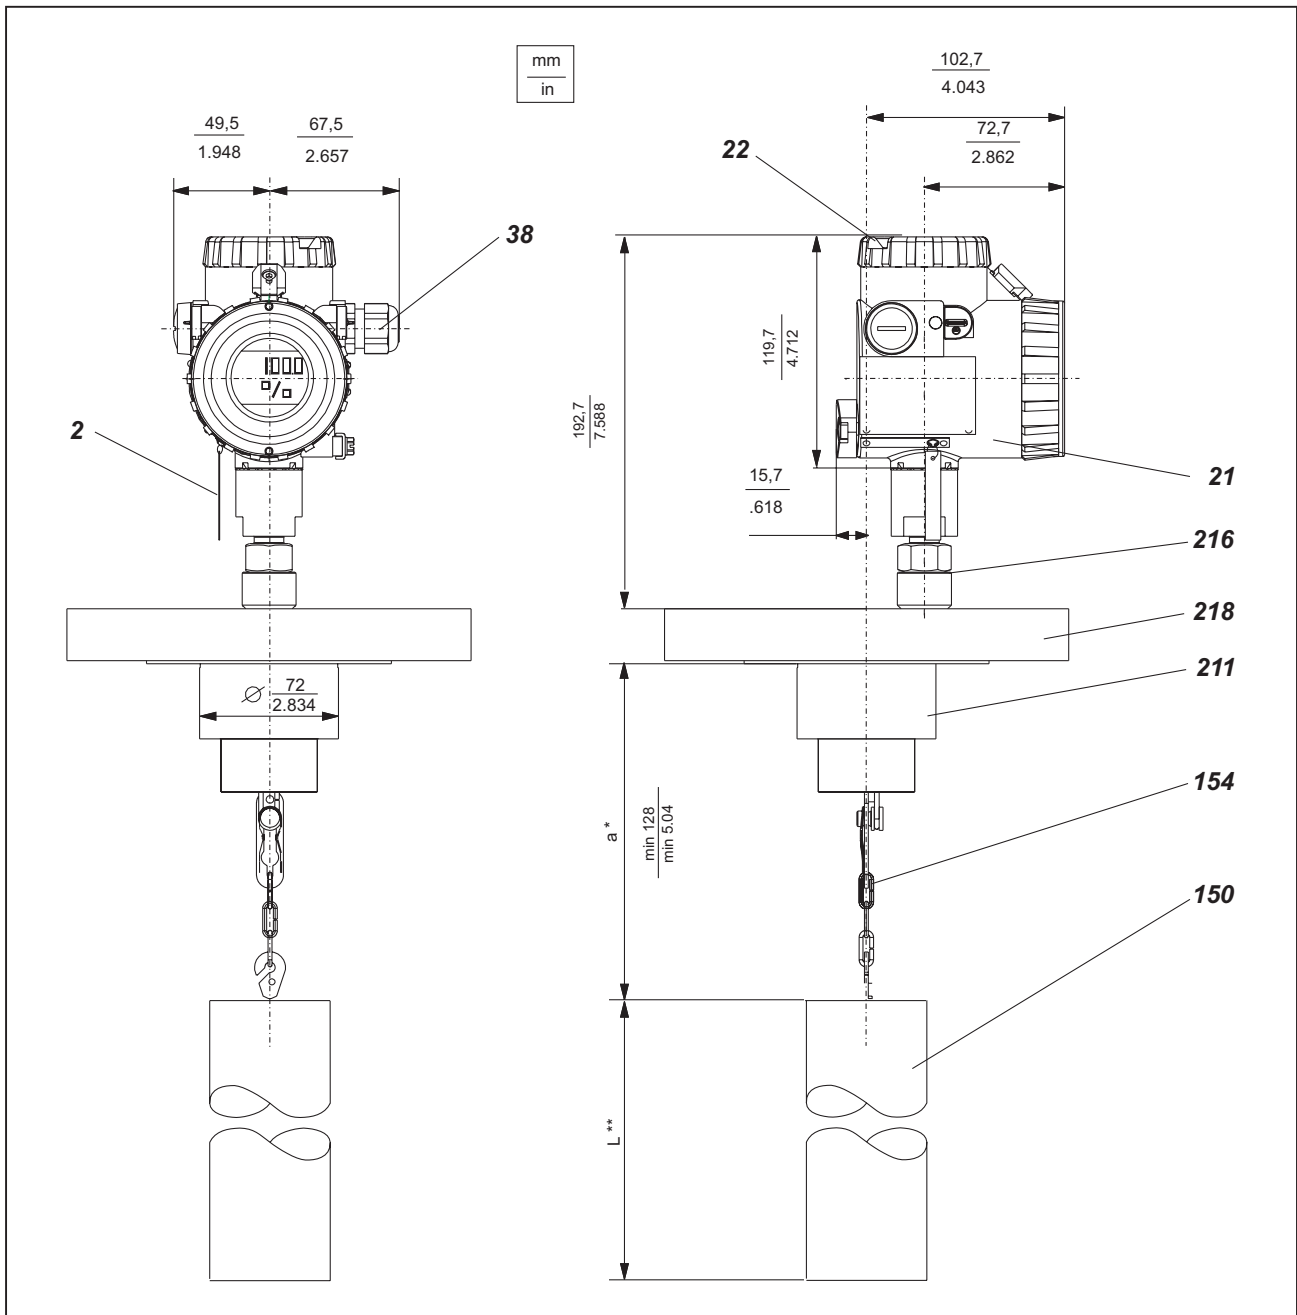


- 22** Top housing cover
- 38** Cable entry with cable gland
- 21** Amplifier housing
- 216** Disconnection of sensor from the amplifier or for the connection of the remote amplifier mounting kit (for remote amplifier mounting)
- 218** Connection flange (according to DIN / ANSI)
- 211** Measuring cell
- 154** Suspension
- 150** Displacer 104DE
- 2** Steel label with Tag.No.

* Suited to the dimensions of FOXBORO ECKARDT - displacer, other lengths on order.

** L = length of displacer

DIMENSIONS (continued)

With Adapter
DN 70, PN 500, 3 inch Class 1500 and 3 inch Class 2500

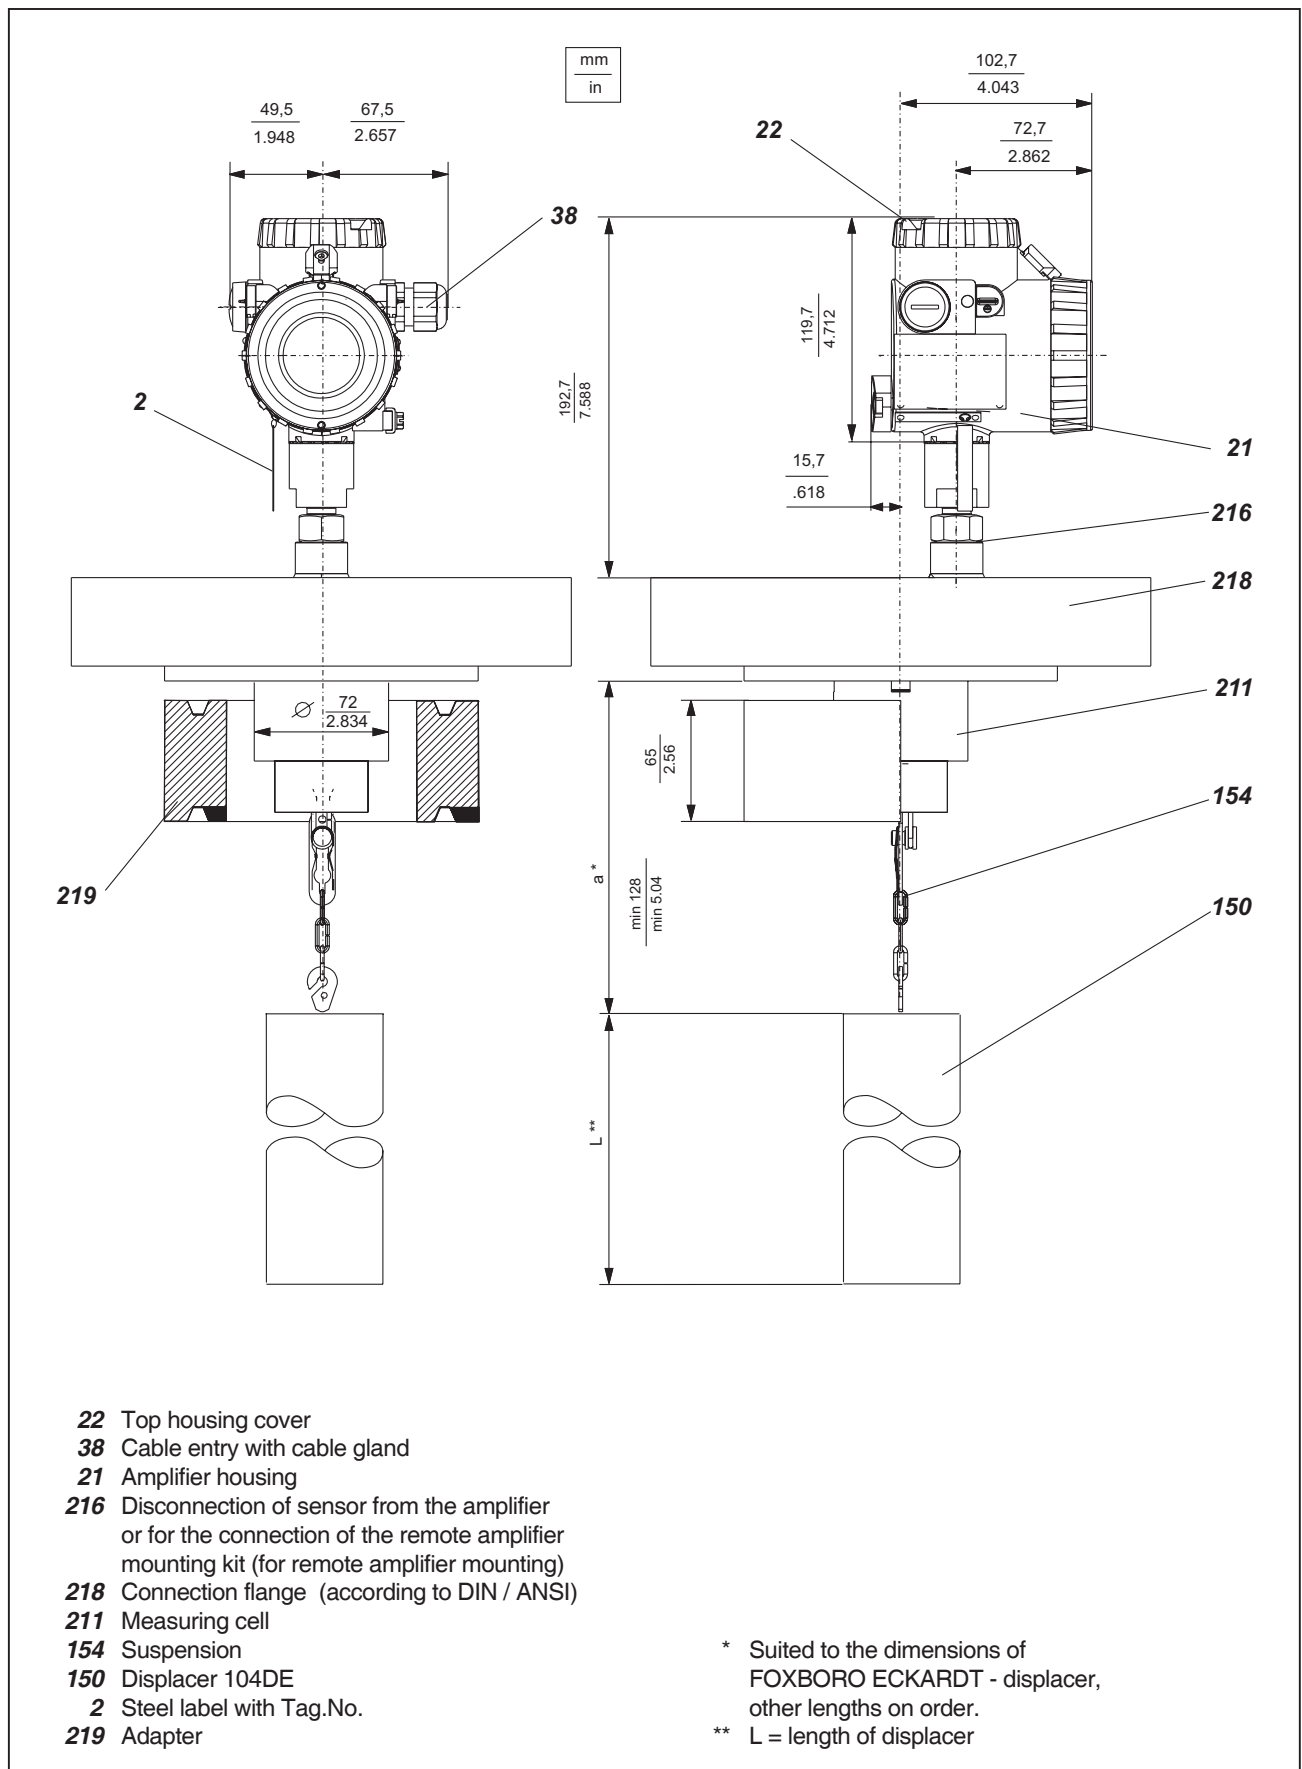

Appendix

11 SUPPLY OF TRANSMITTER

11.1 General

Depending on the transmitter application varying demands are made on the supply. The different operating modes are explained in the following chapters. The wire diagram is shown in Figures 1 to 5.

The power supply units for different applications (direct / via power supply unit of transmitters, HART / FOXCOM / without communication, intrinsically / not intrinsically) are listed in the following table.


All listed supply devices are available for intrinsically-safe and/or non-intrinsically-safe application.

Application and associated supply


Application	Supply (recommended)
without communication	direct, MT228
HART	direct, MT228
FOXCOM analog	direct, MT228
FOXCOM digital	Foxboro I/A-System, MT228

11.2 Overview of application types


Supply via power supply unit (Fig. 1)

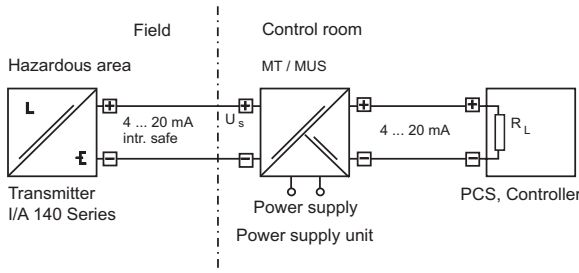


Direct supply (Fig. 2)

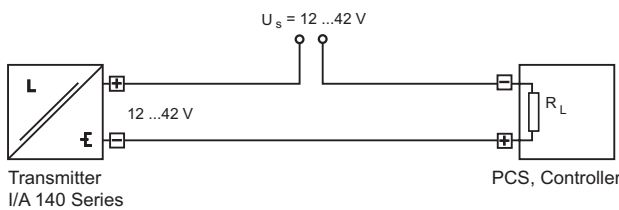

Supply via power supply unit with communication (Fig. 3)

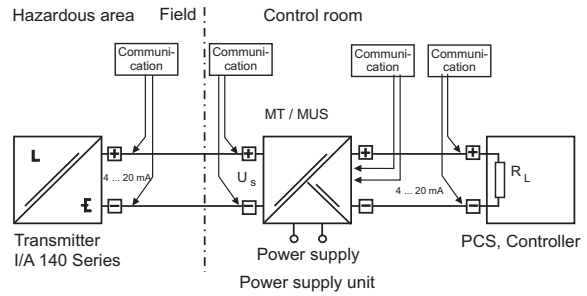

Direct supply with communication (Fig. 4)

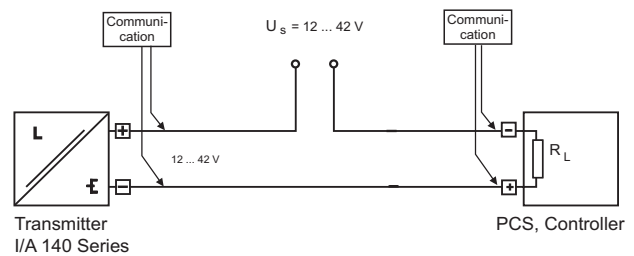

Direct supply via Foxboro I/A control system (Fig. 5, FoxCom)



11.2.1 Supply via power supply unit

This supply is recommended for normal use. Interferences are prevented due to galvanic separation of measurement loop, load and power supply in the power supply unit (see fig. 1)

11.2.2 Direct supply

This most simple version can be recommended only for single galvanically separated supply or measurement loops (see fig. 2)


The max. load impedance is calculated per:

$$R_{Bmax} = (U_{max} - 12 V) / I_{max}$$

U_{max} : max. permitted voltage (acc. to product specifications), depends on type of transmitter and explosion protection

I_{max} : 12 mA for transmitter in FOXCOM digital mode, 23 mA for all other transmitters (HART and FOXCOM)

**Permissible load depending on supply voltage.
Example of a non intrinsically safe 140 series HART
transmitter (Fig. 6)**

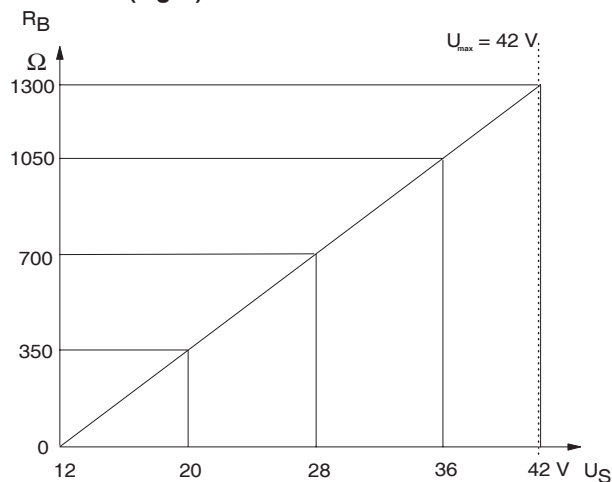

11.2.3 Communication

In contrast to conventional operating mode in the two-wire loop **a minimal load for all communication modes** has to be available. If this load is selected too low, the communication is short-circuited.

(FOXBORO ECKARDT power supply units capable for communication (MT228, MUS925) already have respective loads).

Additionally, the line lengths have to be limited to the max. permitted values for the respective communication

Standard values

Communication	HART	FOXCOM analog	FOXCOM digital
Min. load	250 Ω	200 Ω	200 Ω
Max. capacity of line	< 200 nF		
Max. length of line	ca. 3300 m	1800 m	600 m

The respective wiring diagram is shown in Figure 3.

Figure 4 shows the respective wiring diagram without power supply unit for galvanically separated loops. The operating tool - handterminal, PC with software ¹⁾ and modem ²⁾ - can be connected to the labeled positions. Depending on the application the regulations for explosion protection have to be observed also for the operating tools!

11.3.4 Operating via I/A Series System (FoxCom)

For operation via control system the devices have to be wired as shown in Figure 3 or 5. If a FBM43 or FBM44 is used in combination with a power supply unit - e.g. for intrinsically-safe applications - the non-supplying input (+ and -) of the module has to be used.

Another possibility - recommended for galvanically separated loops - shows Fig. 5. In this arrangement the supplying input (P+ and -) of the module has to be used.

Even if the I/A system is used for communication, additionally the boundary conditions listed under "communication" are to be kept.

11.2.5 Intrinsically-safe application

For intrinsically-safe application generally the use of a respective power supply unit is recommended. Wiring should be done as per respective national and international standards and regulations - as described in "Supply via power supply unit". If communication is required also, the guidelines of chapter "Communication" have to be observed. In addition, the application of the operating tools and their permitted limit values are to be observed.

1) Depending on the communication protocol (HART or FOXCOM) different software tools can be used.

HART: PC20, ABO991, TSP991 or WPP991

FOXCOM: PC20, PC10

For further informations see respective documentation

2) Both communication protocols need different modems

11.3 PROFIBUS-PA

The operation of the transmitter takes place digital, as per PROFIBUS-PA Profile Class B acc. to EN 50170 and DIN 19245 part 4.

Data transmission via bit synchronous current modulation with a speed of 31250 bits via twisted and shielded two-wire connections acc. to IEC 1158-2.

The transmitter has to be connected to a segment coupler, which has to be conforming to IEC 1158-2. For operation in explosion hazardous areas, a segment coupler in explosion proof version has to be used.

Supply as well as communication takes place via the bus with cable shielded on both sides and bus terminators according to recommendation IEC 1158-2. See also connection in chapter 6.

All components which are connected to the transmitter in an explosion hazardous area, require an Ex Approval. The therein applicable limit values must not be exceeded in any case. These limit values also have to be adhered to when connecting additional capacitances, inductances, voltages and currents.

11.4 FOUNDATION Fieldbus

The operation of the transmitter takes place digital, as per Fieldbus Interface acc. to IEC 1158-2, FF Specifications Rev. 1.4, Link-Master (LAS).

Data transmission via bit synchronous current modulation with a speed of 31250 bits via twisted and shielded two-wire connections acc. to IEC 1158-2.

The transmitter has to be connected to a segment coupler, which has to be conforming to IEC 1158-2. For operation in explosion hazardous areas, a segment coupler in explosion proof version has to be used.

Supply as well as communication takes place via the bus with cable shielded on both sides and bus terminators according to recommendation IEC 1158-2. See also connection in chapter 6.

All components which are connected to the transmitter in an explosion hazardous area, require an Ex Approval. The therein applicable limit values must not be exceeded in any case. These limit values also have to be adhered to when connecting additional capacitances, inductances, voltages and currents.

Subject to alterations - reprinting, copying and translation prohibited. Products and publications are normally quoted here without reference to existing patents, registered utility models or trademarks. The lack of any such reference does not justify the assumption that a product or symbol is free.

FOXBORO ECKARDT GmbH
Postfach 50 03 47
D-70333 Stuttgart
Tel. # 49(0)711 502-0
Fax # 49(0)711 502-597
<http://www.foxboro-eckardt.com>

DOKT 534 308 065

Invensys